

Service Facts


Upflow/Horizontal and Dedicated Downflow Gas-Fired, Direct/Non-Direct Vent, 2-Stage Condensing Variable Speed Furnaces

Upflow, Convertible to Horizontal Right or Horizontal Left

S9V2B040U3PSBC/D
S9V2B060U4PSBC/D
S9V2B080U4PSBC/D
S9V2C080U5PSBC/D
S9V2C100U5PSBC/D
S9V2D120U5PSBC/D

Downflow Only

S9V2B040D3PSBC/D
S9V2B060D3PSBC/D
S9V2B080D4PSBC/D
S9V2C100D5PSBC/D
S9V2D120D5PSBC/D

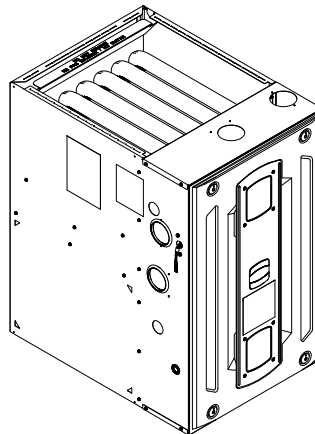

Note: Graphics in this document are for representation only. Actual model may differ in appearance.

⚠ CAUTION

COIL REQUIREMENT!

Failure to follow this Caution could result in property damage or personal injury. 4GXC* and 4MXC* coils installed on upflow furnaces in vertical, horizontal left, or horizontal right orientations without a factory installed metal drain pan shield must use a MAY*FERCOLKITAA kit. Coils installed on upflow furnaces must have drain pans that are suitable for 400° F (205°C) or have a metal drain pan shield. Downflow furnaces do not require a metal drain pan shield or the use of the MAY*FERCOLKITAA kit. See Installer's Guide for more information.



S9V2-SF-2B-EN

⚠ SAFETY WARNING

Only qualified personnel should install and service the equipment. The installation, starting up, and servicing of heating, ventilating, and air-conditioning equipment can be hazardous and requires specific knowledge and training. Improperly installed, adjusted or altered equipment by an unqualified person could result in death or serious injury. When working on the equipment, observe all precautions in the literature and on the tags, stickers, and labels that are attached to the equipment.

SAFETY SECTION – FURNACES

Important: – This document pack contains a wiring diagram and service information. This is customer property and is to remain with this unit. Please return to service information pack upon completion of work.

⚠ WARNING

FIRE OR EXPLOSION HAZARD!

Failure to follow safety warnings exactly could result in a fire or explosion causing property damage, personal injury or loss of life.

– Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. – **WHAT TO DO IF YOU SMELL GAS**

- Do not try to light any appliance.
 - Do not touch any electrical switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

⚠ WARNING

EXPLOSION HAZARD!

Failure to follow this Warning could result in property damage, personal injury or death. Install a gas detecting warning device in case of a gas leak. **NOTE: The manufacturer of your furnace does not test any detectors and makes no representations regarding any brand or type of detector.**

⚠ WARNING

FIRE OR EXPLOSION HAZARD!

Failure to follow the safety warnings exactly could result in serious injury, death, or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury, or loss of life.

⚠ WARNING

ELECTRICAL SHOCK, FIRE, OR EXPLOSION HAZARD!

Failure to follow this Warning could result in dangerous operation, property damage, severe personal injury, or death.

Improper servicing could result in dangerous operation, property damage, severe personal injury, or death.

- Before servicing, disconnect all electrical power to furnace.
- When servicing controls, label all wires prior to disconnection. Reconnect wires correctly.
- Verify proper operation after servicing.

⚠ WARNING

CARBON MONOXIDE POISONING HAZARD!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

To ensure furnace is vented properly, do not replace factory supplied venting components with field fabricated parts. Fabricating parts can result in damaged vents and components allowing carbon monoxide to escape the venting system.

⚠ WARNING

CARBON MONOXIDE HAZARD!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Do not attempt to change the venting system. Follow the installation and operation instructions for the venting system.

⚠ WARNING

FIRE HAZARD!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Do not install the furnace directly on carpeting, tile or other combustible material other than wood flooring. For vertical downflow applications, subbase (BAYBASE205) must be used between the furnace and combustible flooring. When the downflow furnace is installed vertically with a cased coil, a subbase is not required.

⚠ WARNING**WARNING!**

This product can expose you to chemicals including lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm.

For more information go to www.P65Warnings.ca.gov.

⚠ WARNING**EXPLOSION HAZARD!**

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Propane gas is heavier than air and may collect in any low areas or confined spaces. In addition, odorant fade may make the gas undetectable except with a warning device. If the gas furnace is installed in a basement, an excavated area or a confined space, it is strongly recommended to contact a gas supplier to install a gas detecting warning device in case of leak. The manufacturer of your furnace does not test any detectors and makes no representations regarding any brand or type of detector.

⚠ WARNING**ELECTRICAL SHOCK HAZARD!**

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Do not bypass the door switch or panel loop by any permanent means.

⚠ WARNING**ELECTRICAL SHOCK HAZARD!**

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Do not touch any components other than the Menu and Option buttons on the IFC when setting up the system or during fault code recovery.

⚠ WARNING**FIRE OR EXPLOSION HAZARD!**

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Do **NOT** attempt to manually light the furnace.

⚠ WARNING**CARBON MONOXIDE POISONING HAZARD!**

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Follow the service and/or periodic maintenance instructions for the Furnace and venting system.

⚠ WARNING**CARBON MONOXIDE POISONING HAZARD!**

Failure to follow this Warning could result in serious personal injury or death.

Make sure that the blower door is in place and not ajar. Dangerous fumes could escape an improperly secured door.

⚠ WARNING**ELECTRICAL SHOCK HAZARD!**

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Disconnect power to the unit before removing the blower door. Allow a minimum of 10 seconds for IFC power supply to discharge to 0 volts.

⚠ WARNING**SAFETY HAZARD!**

Failure to follow this Warning could result in property damage, severe personal injury, or death.

These furnaces are not approved or intended for installation in trailers or recreational vehicles. Installation in manufactured (mobile) housing is only approved with BAYMFGH Kit.

⚠ WARNING**EXPLOSION HAZARD!**

Failure to follow this Warning could result in property damage, severe personal injury, or death.

In the event that electrical, fuel, or mechanical failures occur, shut gas supply off at the manual gas valve located on the supply gas piping coming into the furnace before turning off the electrical power to the furnace. Contact the service agency designated by your dealer.

⚠ WARNING

EXPLOSION HAZARD!

Failure to follow this Warning could result in property damage, serious personal injury, or death.

Do not store combustible materials, gasoline, or other flammable vapors or liquids near the unit.

⚠ WARNING

SAFETY HAZARD!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Do not use semi-rigid metallic gas connectors (flexible gas lines) within the furnace cabinet.

⚠ WARNING

INSTALLATION WARNING — HIGH VOLTAGE MOVING PARTS!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Bodily injury can result from high voltage electrical components, fast moving fans, and combustible gas. For protection from these inherent hazards during installation and servicing, the main gas valve must be turned off and the electrical supply must be disconnected. If operating checks must be performed with the unit operating, it is the technician's responsibility to recognize these hazards and proceed safely.

⚠ WARNING

SAFETY HAZARD!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Do not install the filter in the return duct directly above the furnace in horizontal applications. Install the filter remotely.

⚠ WARNING

SAFETY HAZARD!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Turn the power to the furnace off before servicing filters to avoid contact with moving parts.

⚠ WARNING

CARBON MONOXIDE HAZARD!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

Furnace venting into an unlined masonry chimney or concrete chimney is prohibited.

⚠ WARNING

CARBON MONOXIDE HAZARD!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

The chimney liner must be thoroughly inspected to insure no cracks or other potential areas for flue gas leaks are present in the liner. Liner leaks will result in early deterioration of the chimney.

⚠ WARNING

SHOCK HAZARD!

Failure to follow this Warning could result in property damage, severe personal injury, or death.

If a disconnect switch is present, it must always be locked in the open position before servicing the unit.

⚠ WARNING

ELECTRICAL SHOCK HAZARD!

Failure to follow this Warning could result in an electrical shock, fire, injury or death.

Ensure cabinet has an uninterrupted or unbroken ground in accordance with National Electrical Code, ANSI/ NFPA 70 – 'latest edition' and Canadian Electrical Code, CSA C22.1 or local codes to minimize personal injury if an electrical fault should occur.

⚠ WARNING

OVERHEATING AND EXPLOSION HAZARD!

Failure to follow this Warning could result in property damage, personal injury or death.

Should overheating occur, or the gas supply fail to shut off, shut off the gas valve to the unit before shutting off the electrical supply.

⚠ CAUTION**IMPROPER VOLTAGE CONNECTION!**

Failure to follow this Caution could result in property damage.
Do NOT connect the furnace line voltage to a GFCI protected circuit.

⚠ CAUTION**CORROSION WARNING!**

Failure to follow this Caution could result in property damage or personal injury.
Do not install the furnace in a corrosive or contaminated atmosphere.

⚠ CAUTION**SAFETY HAZARD!**

Failure to follow this Caution could result in property damage or personal injury.
The vent for this appliance shall not terminate; (1) Over public walkways; or (2) Near soffit vents or crawl space vents or other areas where condensate or vapor could create a nuisance or hazard or cause property damage; or (3) Where condensate vapor could cause damage or could be detrimental to the operation of regulators, relief valves, or other equipment.

⚠ CAUTION**SHARP EDGE HAZARD!**

Failure to follow this Caution could result in property damage or personal injury.
Be careful of sharp edges on equipment or any cuts made on sheet metal while installing or servicing.

⚠ CAUTION**BACKUP WRENCH REQUIRED!**

Failure to follow this Caution could result in property damage or personal injury.
Use a backup wrench on the gas valve when installing gas piping to prevent damage to the gas valve and manifold assembly.

⚠ CAUTION**FREEZE CAUTION!**

Failure to follow this Caution could result in property damage or personal injury.
If complete furnace shutdown is done during the cold weather months, provisions must be taken to prevent freeze-up of all water pipes and water receptacles.

⚠ CAUTION**FREEZE CAUTION!**

Failure to follow this Caution could result in property damage or personal injury.
When the vent pipe is exposed to temperatures below freezing, i.e., when it passes through unheated spaces, etc., the pipe must be insulated with 1/2 inch (12.7 mm) thick Armaflex-type insulation or equal. If the space is heated sufficiently to prevent freezing, then the insulation would not be required. If domestic water pipes are not protected from freezing then the space meets the condition of a heated space.

⚠ CAUTION**FREEZE CAUTION!**

Failure to follow this Caution could result in property damage or personal injury.
Whenever your house is to be vacant, arrange to have someone inspect your house for proper temperature. This is very important during freezing weather. If for any reason your furnace should fail to operate damage could result, such as frozen water pipes.

⚠ CAUTION**FREEZE CAUTION!**

Failure to follow this Caution could result in property damage or personal injury.
Caution should be taken to prevent drains from freezing or causing slippery conditions. Excessive draining of condensate may cause saturated ground conditions that may result in damage to plants.

⚠ CAUTION**IGNITION FUNCTION!**

Failure to follow this Caution may result in poor ignition characteristics.
Maintain manifold pressure in high altitude installations.

⚠ CAUTION**WATER DAMAGE!**

Failure to follow this Caution could result in property damage or personal injury.
It is recommended that an external overflow drain pan be installed in all applications over a finished ceiling to prevent property damage or personal injury from leaking condensate.

⚠ CAUTION

HOT SURFACE!

Failure to follow this Caution could result in personal injury.
Do NOT touch igniter. It is extremely hot.

⚠ CAUTION

FURNACE SERVICE CAUTION!

Failure to follow this Caution could result in property damage or personal injury.
Label all wires prior to disconnection when servicing controls. Verify proper operation after servicing. Wiring errors can cause improper and dangerous operation.

⚠ CAUTION

DO NOT USE AS CONSTRUCTION HEATER!

Failure to follow this Caution could result in property damage or personal injury.
In order to prevent shortening its service life, the Furnace should NOT be used as a “Construction Heater” during the finishing phases of construction until the requirements listed in the furnace installation guidelines of the Installer’s Guide have been met. Condensate in the presence of chlorides and fluorides from paint, varnish, stains, adhesives, cleaning compounds, and cement create a corrosive condition which may cause rapid deterioration of the heat exchanger.

⚠ CAUTION

WIRING INFORMATION!

Failure to follow this Caution could result in property damage or personal injury.
The integrated furnace control is polarity sensitive. The hot leg of the 120 VAC power must be connected to the BLACK field lead.

⚠ WARNING

CARBON MONOXIDE POISONING HAZARD!

Failure to follow the steps outlined below for each appliance connected to the venting system being placed into operation could result in carbon monoxide poisoning or death.

The following steps shall be followed for each appliance connected to the venting system being placed into operation, while all other appliances connected to the venting system are not in operation:

- Inspect the venting system for proper size and horizontal pitch as required in the National Fuel Gas Code, ANSI Z223.1/NFPA 54 or the CSA B149.1 *Natural Gas and Propane Installation Code* and these instructions. Determine there is no blockage or restriction, leakage, corrosion or other deficiencies which could cause an unsafe condition.
- Close all doors and windows between the space in which the appliance(s) connected to the venting system are located. Also close fireplace dampers.
- Turn on clothes dryers and any appliance not connected to the venting system. Turn on any exhaust fans such as range hoods so they are operating at maximum speed. Do not operate a summer exhaust fan.
- Follow the lighting instructions. Place the appliance being inspected into operation. Adjust the thermostat so appliance is operating continuously.
- Test for spillage from draft hood equipped appliances at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle.
- If improper venting is observed during any of the above tests, the venting system must be corrected in accordance with the National Fuel Gas Code, ANSI Z221.1/NFPA 54 and/or CSA B149.1 *Natural Gas and Propane Installation Code*.
- After it has been determined that each appliance connected to the venting system properly vents when tested, return all doors, windows, exhaust fans, etc. to their previous condition of use.

⚠ CAUTION**VENTING REQUIREMENT!**

Failure to follow this Caution could result in property damage or personal injury. For condensing furnaces, Do NOT run vent through chimney for wood burning or oil Furnaces or incinerators. If remaining free area between single wall flue pipe and masonry chimney is to be used for another gas appliance, venting area must be sufficient to vent that appliance and that appliance must be connected to chimney with separate entry openings.

IMPORTANT – *The single wall flue pipe joints must be sealed. The 90° elbow connection to vertical pipe must be sealed to prevent condensate leakage to base of masonry chimney.*

⚠ CAUTION**VENTING REQUIREMENT!**

Failure to follow this Caution could result in property damage or personal injury. Condensing furnaces may be vented through UNUSED chimneys. Do NOT run vent through chimney for wood burning or oil Furnaces or incinerators or any other gas appliance.

IMPORTANT – *The single wall flue pipe joints must be sealed. The 90° elbow connection to vertical pipe must be sealed to prevent condensate leakage to base of masonry chimney.*

⚠ CAUTION**EQUIPMENT DAMAGE!**

UV light exposure can cause the plastic blower material to deteriorate which could lead to Blower Housing Damage.

For units containing a plastic Blower Housing, Do NOT install third party Ultra-Violet Air Cleaners where the Blower Housing can be exposed to UV light.

For more information, visit www.trane.com and www.americanstandardair.com or contact your installing dealer.
6200 Troup Highway
Tyler, TX 75707

Coil Caution**⚠ CAUTION****COIL REQUIREMENT!!**

Failure to follow this Caution could result in property damage or personal injury. 4GXC* and 4MXC* coils installed on upflow furnaces in vertical, horizontal left, or horizontal right orientations without a factory installed metal drain pan shield must use a MAY*FERCOLKITAA kit. Coils installed on upflow furnaces must have drain pans that are suitable for 400° F (205° C) or have a metal drain pan shield. Downflow furnaces do not require a metal drain pan shield or the use of the MAY*FERCOLKITAA kit. See Installer's Guide for more information.

Product Specification

Model	S9V2B040U3PSBC/D (a), (b)	S9V2B060U4PSBC/D (a), (b)	S9V2B080U4PSBC/D (a), (b)
Type	Upflow / Horizontal	Upflow / Horizontal	Upflow / Horizontal
RATINGS (c)			
1st Stage Input BTUH	26,000	39,000	52,000
1st Stage Capacity BTUH (ICS)	25,300	38,100	50,500
2nd Stage Input BTUH	40,000	60,000	80,000
2nd Stage Capacity BTUH (ICS) (d)	38,950	58,400	77,700
1st Stage Temp. Rise (Min. - Max.) °F	25 - 55	25 - 55	30 - 60
2nd Stage Temp. Rise (Min. - Max.) °F	30 - 60	35 - 65	35 - 65
AFUE (%) (d)	96.0	96.0	96.0
Return Air Temp. (Min. - Max.) °F	45°F - 80°F	45°F - 80°F	45°F - 80°F
BLOWER DRIVE	DIRECT	DIRECT	DIRECT
Diameter - Width (in.)	11 X 8	11 X 8	11 X 8
No. Used	1	1	1
Speeds (No.)	Variable	Variable	Variable
CFM vs. in. w.g.	See Fan Performance Table	See Fan Performance Table	See Fan Performance Table
Motor HP	1/2	3/4	3/4
R.P.M.	Variable	Variable	Variable
Volts / Ph / Hz	120 / 1 / 60	120 / 1 / 60	120 / 1 / 60
FLA	5.7 / 6.4	8 / 9.6	8 / 9.6
COMBUSTION FAN - Type	PSC	PSC	PSC
Drive - No. Speeds	Direct - 2	Direct - 2	Direct - 2
Motor RPM	3300/2600	3300/2600	3300/2600
Volts/Ph/Hz	120 / 1 / 60	120 / 1 / 60	120 / 1 / 60
FLA	0.66	0.66	0.66
Inducer Orifice	0.61	0.79	0.96
FILTER - Furnished?	No	No	No
Type Recommended	High Velocity	High Velocity	High Velocity
Hi Vel. (No.-Size-Thk.)	1 - 16 X 25 - 1 in.	1 - 16 X 25 - 1 in.	1 - 16 X 25 - 1 in.
VENT OUTLET DIAMETER - MIN. (in.) (e)	2 Round	2 Round	2 Round
INLET AIR DIAMETER - MIN. (in.) (e)	2 Round	2 Round	2 Round
HEAT EXCHANGER - Type			
Fired	409 Stainless Steel	409 Stainless Steel	409 Stainless Steel
Unfired	29-4C Stainless Steel	29-4C Stainless Steel	29-4C Stainless Steel
Gauge (Fired)	20	20	20
ORIFICES - Main			
Nat. Gas (Qty. - Drill Size)	2 - 45	3 - 45	4 - 45

Model	S9V2B040U3PSBC/D (a), (b)	S9V2B060U4PSBC/D (a), (b)	S9V2B080U4PSBC/D (a), (b)
Propane Gas (Qty. - Drill Size)	2 - 5/6	3 - 5/6	4 - 5/6
GAS VALVE	Redundant - Two Stage	Redundant - Two Stage	Redundant - Two Stage
PILOT SAFETY DEVICE – Type	120 V SiNi Igniter	120 V SiNi Igniter	120 V SiNi Igniter
BURNERS - TYPE - QTY	Inshot - 2	Inshot - 3	Inshot - 4
POWER CONN. - V/Ph/HZ ^(f)	120 / 1 / 60	120 / 1 / 60	120 / 1 / 60
Ampacity (Amps)	7.9 / 8.8	10.8 / 12.8	10.8 / 12.8
Max. Overcurrent Protection (Amps)	15	15	15
PIPE CONN. SIZE (IN.)	1/2	1/2	1/2

(a) Meets Energy Star

(b) Central Furnace heating designs are certified to ANSI Z21.47 / CSA 2.3 - latest edition.

(c) For U.S. Applications, above input ratings (BTUH) are up to 2,000 feet, derate 4% per 1,000 feet for elevations above 2,000 feet above sea level. For Canadian applications, above input ratings (BTUH) are up to 4,500 feet, derate 4% per 1,000 feet for elevations above 4,500 feet above sea level.

(d) Based on U.S. government standard tests.

(e) Refer to Vent Length Table in the Installer's Guide.

(f) The above wiring specifications are in accordance with National Electrical Code; however, installations must comply with local codes.

Model	S9V2C080U5PSBC/D (a), (b)	S9V2C100U5PSBC/D (a), (b)	S9V2D120U5PSBC/D (a), (b)
Type	Upflow / Horizontal	Upflow / Horizontal	Upflow / Horizontal
RATINGS ^(c)			
1st Stage Input BTUH	52,000	65,000	78,000
1st Stage Capacity BTUH (ICS)	50,600	63,400	75,500
2nd Stage Input BTUH	80,000	100,000	120,000
2nd Stage Capacity BTUH (ICS) ^(d)	77,750	97,650	115,700
1st Stage Temp. Rise (Min. - Max.) °F	30 - 60	25 - 55	35 - 65
2nd Stage Temp. Rise (Min. - Max.) °F	35 - 65	30 - 60	40 - 70
AFUE (%) ^(d)	96.0	96.0	96.0
Return Air Temp. (Min. - Max.) °F	45°F - 80°F	45°F - 80°F	45°F - 80°F
BLOWER DRIVE	DIRECT	DIRECT	DIRECT
Diameter - Width (in.)	11 X 10	11 X 10	11 X 10
No. Used	1	1	1
Speeds (No.)	Variable	Variable	Variable
CFM vs. in. w.g.	See Fan Performance Table	See Fan Performance Table	See Fan Performance Table
Motor HP	1	1	1
R.P.M.	Variable	Variable	Variable
Volts / Ph / Hz	120 / 1 / 60	120 / 1 / 60	120 / 1 / 60
FLA	10.5 / 10	10.5 / 10	10.5 / 10
COMBUSTION FAN - Type	PSC	PSC	PSC
Drive - No. Speeds	Direct - 2	Direct - 2	Direct - 2
Motor RPM	3300/2600	3300/2600	3300/2600
Volts/Ph/Hz	120 / 1 / 60	120 / 1 / 60	120 / 1 / 60
FLA	0.66	0.66	0.66

Product Specification

Model	S9V2C080U5PSBC/D (a), (b)	S9V2C100U5PSBC/D (a), (b)	S9V2D120U5PSBC/D (a), (b)
Inducer Orifice	0.88	1.05	1.19
FILTER - Furnished?	No	No	No
Type Recommended	High Velocity	High Velocity	High Velocity
Hi Vel. (No.-Size-Thk.)	1 - 20 X 25 - 1 in.	1 - 20 X 25 - 1 in.	1 - 24 X 25 - 1 in.
VENT OUTLET DIAMETER - MIN. (in.) (e)	2 Round	2 Round	3 Round
INLET AIR DIAMETER - MIN. (in.) (e)	2 Round	2 Round	3 Round
HEAT EXCHANGER - Type			
Fired	409 Stainless Steel	409 Stainless Steel	409 Stainless Steel
Unfired	29-4C Stainless Steel	29-4C Stainless Steel	29-4C Stainless Steel
Gauge (Fired)	20	20	20
ORIFICES - Main			
Nat. Gas (Qty. - Drill Size)	4 - 45	5 - 45	6 - 45
Propane Gas (Qty. - Drill Size)	4 - 56	5 - 56	6 - 56
GAS VALVE	Redundant - Two Stage	Redundant - Two Stage	Redundant - Two Stage
PILOT SAFETY DEVICE - Type	120 V SiNi Igniter	120 V SiNi Igniter	120 V SiNi Igniter
BURNERS - TYPE - QTY	Inshot - 4	Inshot - 5	Inshot - 6
POWER CONN. - V/Ph/HZ (f)	120 / 1 / 60	120 / 1 / 60	120 / 1 / 60
Ampacity (Amps)	13.9 / 13.3	13.9 / 13.3	13.9 / 13.3
Max. Overcurrent Protection (Amps)	15	15	15
PIPE CONN. SIZE (IN.)	1/2	1/2	1/2

(a) Meets Energy Star

(b) Central Furnace heating designs are certified to ANSI Z21.47 / CSA 2.3 - latest edition.

(c) For U.S. Applications, above input ratings (BTUH) are up to 2,000 feet, derate 4% per 1,000 feet for elevations above 2,000 feet above sea level. For Canadian applications, above input ratings (BTUH) are up to 4,500 feet, derate 4% per 1,000 feet for elevations above 4,500 feet above sea level.

(d) Based on U.S. government standard tests.

(e) Refer to Vent Length Table in the Installer's Guide.

(f) The above wiring specifications are in accordance with National Electrical Code; however, installations must comply with local codes.

Model	S9V2B040D3PSBC/D (a), (b)	S9V2B060D3PSBC/D (a), (b)	S9V2B080D4PSBC/D (a), (b)
Type	Downflow	Downflow	Downflow
RATINGS (c)			
1st Stage Input BTUH	26,000	39,000	52,000
1st Stage Capacity BTUH (ICS)	25,300	37,700	50,300
2nd Stage Input BTUH	40,000	60,000	80,000
2nd Stage Capacity BTUH (ICS) (d)	38,850	57,850	77,350
1st Stage Temp. Rise (Min. - Max.) °F	25 - 55	25 - 55	30 - 60
2nd Stage Temp. Rise (Min. - Max.) °F	30 - 60	35 - 65	35 - 65
AFUE (%) (d)	96.0	96.0	96.0
Return Air Temp. (Min. - Max.) °F	45°F - 80°F	45°F - 80°F	45°F - 80°F
BLOWER DRIVE	DIRECT	DIRECT	DIRECT
Diameter - Width (in.)	11 X 8	11 X 8	11 X 8

Model	S9V2B040D3PSBC/D (a), (b)	S9V2B060D3PSBC/D (a), (b)	S9V2B080D4PSBC/D (a), (b)
No. Used	1	1	1
Speeds (No.)	Variable	Variable	Variable
CFM vs. in. w.g.	See Fan Performance Table	See Fan Performance Table	See Fan Performance Table
Motor HP	1/2	1/2	3/4
R.P.M.	Variable	Variable	Variable
Volts / Ph / Hz	120 / 1 / 60	120 / 1 / 60	120 / 1 / 60
FLA	5.7 / 6.4	5.7 / 6.4	8 / 9.6
COMBUSTION FAN - Type	PSC	PSC	PSC
Drive - No. Speeds	Direct - 2	Direct - 2	Direct - 2
Motor RPM	3300/2600	3300/2600	3300/2600
Volts/Ph/Hz	120 / 1 / 60	120 / 1 / 60	120 / 1 / 60
FLA	0.66	0.66	0.66
Inducer Orifice	0.61	0.79	0.96
FILTER - Furnished?	No	No	No
Type Recommended	High Velocity	High Velocity	High Velocity
Hi Vel. (No.-Size-Thk.)	1 - 16 X 25 - 1 in.	1 - 16 X 25 - 1 in.	1 - 16 X 25 - 1 in.
VENT OUTLET DIAMETER - MIN. (in.) ^(e)	2 Round	2 Round	2 Round
INLET AIR DIAMETER -MIN. (in.) ^(e)	2 Round	2 Round	2 Round
HEAT EXCHANGER – Type			
Fired	409 Stainless Steel	409 Stainless Steel	409 Stainless Steel
Unfired	29-4C Stainless Steel	29-4C Stainless Steel	29-4C Stainless Steel
Gauge (Fired)	20	20	20
ORIFICES - Main			
Nat. Gas (Qty. - Drill Size)	2 - 45	3 - 45	4 - 45
Propane Gas (Qty. - Drill Size)	2 - 56	3 - 56	4 - 56
GAS VALVE	Redundant - Two Stage	Redundant - Two Stage	Redundant - Two Stage
PILOT SAFETY DEVICE			
Type	120 V SiNi Igniter	120 V SiNi Igniter	120 V SiNi Igniter
BURNERS - TYPE - QTY	Inshot - 2	Inshot - 3	Inshot - 4
POWER CONN. - V/Ph/HZ ^(f)	120 / 1 / 60	120 / 1 / 60	120 / 1 / 60
Ampacity (Amps)	7.9 / 8.8	7.9 / 8.8	10.8 / 12.8
Max. Overcurrent Protection (Amps)	15	15	15
PIPE CONN. SIZE (IN.)	1/2	1/2	1/2

^(a) Meets Energy Star

^(b) Central Furnace heating designs are certified to ANSI Z21.47 / CSA 2.3 - latest edition.

^(c) For U.S. Applications, above input ratings (BTUH) are up to 2,000 feet, derate 4% per 1,000 feet for elevations above 2,000 feet above sea level. For Canadian applications, above input ratings (BTUH) are up to 4,500 feet, derate 4% per 1,000 feet for elevations above 4,500 feet above sea level.

^(d) Based on U.S. government standard tests.

^(e) Refer to Vent Length Table in the Installer's Guide.

^(f) The above wiring specifications are in accordance with National Electrical Code; however, installations must comply with local codes.

Product Specification

Model	S9V2C100D5PSBC/D (a), (b)	S9V2D120D5PSBC/D (a), (b)
Type	Downflow	Downflow
RATINGS (c)		
1st Stage Input BTUH	65,000	78,000
1st Stage Capacity BTUH (ICS)	63,300	75,800
2nd Stage Input BTUH	100,000	120,000
2nd Stage Capacity BTUH (ICS) (d)	97,150	116,100
1st Stage Temp. Rise (Min. - Max.) °F	30 - 60	30-60
2nd Stage Temp. Rise (Min. - Max.) °F	35 - 65	35-65
AFUE (%) (d)	96.0	96.0
Return Air Temp. (Min. - Max.) °F	45°F - 80°F	45°F - 80°F
BLOWER DRIVE	DIRECT	DIRECT
Diameter - Width (in.)	11 X 10	11 X 10
No. Used	1	1
Speeds (No.)	Variable	Variable
CFM vs. in. w.g.	See Fan Performance Table	See Fan Performance Table
Motor HP	1	1
R.P.M.	Variable	Variable
Volts / Ph / Hz	120 / 1 / 60	120 / 1 / 60
FLA	10.5 / 10	10.5 / 10
COMBUSTION FAN - Type	PSC	PSC
Drive - No. Speeds	Direct - 2	Direct - 2
Motor RPM	3300/2600	3300/2600
Volts/Ph/Hz	120 / 1 / 60	120 / 1 / 60
FLA	0.66	0.66
Inducer Orifice	1.05	1.19
FILTER - Furnished?	No	No
Type Recommended	High Velocity	High Velocity
Hi Vel. (No.-Size-Thk.)	1 - 20 X 25 - 1 in.	1 - 24 X 25 - 1 in.
VENT OUTLET DIAMETER - MIN. (in.) (e)	2 Round	3 Round
INLET AIR DIAMETER - MIN. (in.) (e)	2 Round	3 Round
HEAT EXCHANGER – Type		
Fired	409 Stainless Steel	409 Stainless Steel
Unfired	29-4C Stainless Steel	29-4C Stainless Steel
Gauge (Fired)	20	20
ORIFICES - Main		
Nat. Gas (Qty. - Drill Size)	5 - 45	6 - 45
Propane Gas (Qty. - Drill Size)	5 - 56	6 - 56
GAS VALVE	Redundant - Two Stage	Redundant - Two Stage
PILOT SAFETY DEVICE – Type	120 V SiNi Igniter	120 V SiNi Igniter

Model	S9V2C100D5PSBC/D (a), (b)	S9V2D120D5PSBC/D (a), (b)
BURNERS - TYPE - QTY	Inshot - 5	Inshot - 6
POWER CONN. - V/Ph/HZ (f)	120 / 1 / 60	120 / 1 / 60
Ampacity (Amps)	13.9 / 13.3	13.9 / 13.3
Max. Overcurrent Protection (Amps)	15	15
PIPE CONN. SIZE (IN.)	1/2	1/2

(a) Meets Energy Star

(b) Central Furnace heating designs are certified to ANSI Z21.47 / CSA 2.3 - latest edition.

(c) For U.S. Applications, above input ratings (BTUH) are up to 2,000 feet, derate 4% per 1,000 feet for elevations above 2,000 feet above sea level. For Canadian applications, above input ratings (BTUH) are up to 4,500 feet, derate 4% per 1,000 feet for elevations above 4,500 feet above sea level.

(d) Based on U.S. government standard tests.

(e) Refer to Vent Length Table in the Installer's Guide.

(f) The above wiring specifications are in accordance with National Electrical Code; however, installations must comply with local codes.

Sequence of Operation

Note: The seven segment LED readout is based on thermostat input. During a simultaneous call for W1 and W2, the seven segment LED will read "Ht 2", although the IFC will process the call for 1st stage heat first.

Note: Numbers in Parenthesis () refer to the 12 pin terminal positions.

EAC and HUM Timing

- EAC relay closes approximately 2 seconds after the blower starts.
- EAC relay opens when the blower motor stops.
- HUM relay closes on any heating call (HP/Gas) approximately 1 second after the blower motor starts.
- HUM relay opens when any heating call (HP/Gas) is removed.

1st Stage Gas Heating

1. R – W1 contacts close on the thermostat sending 24VAC to the W1 low voltage terminal of the IFC. Technician should read 24VAC from W1 to B/C. The seven segment LED will read "Ht 1".
2. The IFC performs a self-check routine and then confirms:
 - a. Condensate pressure switch and Inducer limit switch are closed by sending 24VAC out the HLO terminal and monitoring the ILI (1) input.
 - b. Flame roll-out switches (FRS) 1 & 2, main thermal limit (TCO), and any reverse air flow (RAF) switches are proved closed by sending 24VAC out the HLO (4) terminal and monitoring the HLI (11) input.
 - c. Pressure switch 1 (PS1) and pressure switch 2 (PS2) are proved open by sending 24VAC out the HLO terminal, through the limit switches, and monitoring the PS1 and PS2 inputs.

Note: If a thermal limit is open, 24VAC will not be present at either pressure switch.
3. After steps a, b, and c are confirmed, the inducer relay is closed energizing 1st stage inducer. As the inducer ramps up, PS1 will close.
4. When PS1 closes, the ignitor relay on the IFC will close. The ignitor is energized and warm up is approximately 20 seconds.
5. After the ignitor warm up, the 1st stage gas valve relay is closed, energizing the 1st stage gas valve solenoid to allow ignition.
6. The first burner will ignite and flame will crossover to the remaining burners, establishing current to the flame sensor. Flame sensing must take place within 4 seconds.

Note: There are two flame sense pads located on the IFC, marked "FP". To measure the flame current, use a VOM set to DC volts. 1VDC = 1 micro-amp. Flame current will vary depending on the type of meter used. Typical flame current ranges from 0.75 – 3.0 micro-amps (0.75 – 3 VDC).

7. Once flame sense has been achieved, a timer on the IFC starts and after the "Blower On" delay has completed, the indoor blower will energize and run at the 1st stage gas heating speed. The seven segment LED for example will alternately read:
Ht1 = Gas heating, Stage 1
RrF = Airflow
050 = 600 calculated cfm (value shown x 10)
8. When the temperature raises enough to satisfy the thermostat setting, contacts R-W1 will open.
9. The gas valve relay will open, closing the gas valve. The inducer will continue to run for approximately 5 seconds to remove any combustion byproducts from inside the furnace.
10. The indoor blower continues to run to remove heat from the heat exchangers. The blower off time is field adjustable through the IFC menu setup option. The seven segment LED will read "i dL" = Idle, no thermostat demand.

2nd Stage Gas Heating

Note: 2nd stage heating cannot operate without 1st stage operation.

1. R – W1 contacts close on the thermostat sending 24VAC to the W1 low voltage terminal of the IFC. Technician should read 24VAC from W1 to B/C. The seven segment LED will read "Ht 1"
2. The IFC performs a self-check routine and then confirms:
 - a. Condensate pressure switch and Inducer limit switch are proved closed by sending 24VAC out the HLO terminal and monitoring the ILI (1) input.
 - b. Flame roll-out switches (FRS) 1 & 2, main thermal limit (TCO), and any reverse air flow (RAF) switches are closed by sending 24VAC out the HLO (4) terminal and monitoring the HLI (11) input.
 - c. Pressure switch 1 (PS1) and pressure switch 2 (PS2) are proved open by sending 24VAC out the HLO terminal, through the limit switches, and monitoring the PS1 (3) and PS2 (7) inputs.

Note: If a thermal limit is open, 24VAC will not be present at either pressure switch.
3. After steps a, b, and c are confirmed, the inducer relay is closed energizing 1st stage inducer. As the inducer ramps up, PS1 will close.

4. When PS1 closes, the ignitor relay on the IFC will close. The ignitor is energized and warm up is approximately 20 seconds.
5. After the ignitor warm up, the 1st stage gas valve relay is closed, energizing the 1st stage gas valve solenoid to allow ignition.
6. The first burner will ignite and flame will crossover to the remaining burners, establishing current to the flame sensor. Flame sensing must take place within 4 seconds.

Note: *There are two flame sense pads located on the IFC, marked "FP". To measure the flame current, use a VOM set to DC volts. 1VDC = 1 micro-amp. Flame current will vary depending on the type of meter used. Typical flame current ranges from 0.75 – 3.0 micro-amps (0.75 – 3 VDC).*

7. Once flame sense has been achieved, a timer on the IFC starts and after the "Blower On" delay has completed, the indoor blower will energize and run at the 1st stage gas heating speed. The seven segment LED for example will alternately read:

$H\bar{L}1$ = Gas heating, Stage 1

$R\bar{r}F$ = Airflow

$\bar{0}5\bar{0}$ = 600 calculated cfm (value shown x 10)

8. R-W2 contacts close on the thermostat sending 24VAC to the W2 low voltage terminal of the IFC. Technician should read 24VAC from W2 to B/C. The seven segment LED will read " $H\bar{L}2$ ".
9. The IFC then energizes the 2nd stage inducer relay. The inducer ramps to 2nd stage, the second stage gas valve relay on the IFC closes, energizing second stage gas valve. The indoor blower motor will ramp up to the 2nd stage gas heating speed. The seven segment LED for example will alternately read:

$H\bar{L}2$ = Gas heating, Stage 2

$R\bar{r}F$ = Airflow

$\bar{1}2\bar{3}$ = 1230 calculated cfm (value shown x 10)

10. The IFC monitors PS2 for closure and if PS2 does not close within 45 seconds, a PS2 open error will be declared and the furnace will operate in 1st stage. If PS2 closes, 2nd stage gas heating will continue until the thermostat R-W2 contacts open.

Note: *If PS2 does not close within the 45 second time, the IFC will wait 10 minutes and repeat step 9. If on the third attempt during the same heating call, PS2 does not close within the 45 second proving time, the unit will lock out 2nd stage until the heating calls are removed or the power is cycled to the furnace.*

11. When the temperature raises enough to satisfy the thermostat setting, contacts R-W2 will open, 2nd stage gas valve will close, the indoor blower motor will ramp down to 1st stage, and the unit will continue to run until R-W1 contacts open.
12. When the temperature raises enough to satisfy the thermostat setting, contacts R-W1 will open.

13. The gas valve relay will open, closing the gas valve. The inducer will continue to run for approximately 5 seconds to remove any combustion byproducts from inside the furnace.
14. The indoor blower continues to run to remove heat from the heat exchangers. This blower off time is field adjustable through the IFC menu setup option. The seven segment LED will read " $\bar{1}d\bar{L}$ " = Idle, no thermostat demand.

Single Stage Cooling

1. R-Y1-G contacts on the thermostat close sending 24VAC to the Y1 and G low voltage terminals on the IFC. Technician should read 24VAC between Y1-B/C and between G-B/C.

Note: *Factory supplied Y1-O jumper must remain in place for proper seven segment LED readout. If removed, seven segment LED will read "HP 1".*

2. 24VAC is sent to the OD unit via thermostat wiring.
3. The indoor blower ramps to the cooling airflow. The seven segment LED for example will alternately read:

$\bar{C}\bar{L}1$ = Cooling, Stage 1

$R\bar{r}F$ = Airflow

$\bar{0}8\bar{0}$ = 800 calculated cfm (value shown x 10)

4. When the temperature is lowered enough to satisfy the thermostat setting, contacts R-Y1-G will open.
5. The OD unit shuts off and the indoor blower shuts off, unless a blower off delay has been enabled in the IFC setup menu options. The seven segment LED will read " $\bar{1}d\bar{L}$ " = Idle, no thermostat demand.

Two Stage Cooling

1. R-Y1-G contacts on the thermostat close sending 24VAC to the Y1 and G low voltage terminals on the IFC. Technician should read 24VAC between Y1-B/C and between G-B/C.

Note: *Factory supplied Y1-O jumper must remain in place for proper seven segment LED readout. If removed, seven segment LED will read "HP 1".*

2. 24VAC is sent to the OD unit via thermostat wiring energizing 1st stage compressor operation.
3. The indoor blower ramps to the 1st stage cooling airflow. The seven segment LED for example will alternately read:

$\bar{C}\bar{L}1$ = Cooling, Stage 1

$R\bar{r}F$ = Airflow

$\bar{0}8\bar{0}$ = 800 calculated cfm (value shown x 10)

4. R-Y2 contact on the thermostat closes sending 24VAC to Y2 low voltage terminal on the IFC. Technician should read 24VAC between Y2 and B/C.
5. 24VAC is sent to the OD unit via thermostat wiring.
6. The indoor airflow ramps to 2nd stage cooling airflow. The seven segment LED for example will read:

$\bar{C}\bar{L}2$ = Cooling, Stage 2

Sequence of Operation

$R_r F$ = Airflow

150 = 1600 calculated cfm (value shown x 10)

7. When the temperature is lowered enough to satisfy the thermostat setting, contacts R-Y1-Y2-G will open.
8. The OD unit shuts off and the indoor blower shuts off, unless a blower off delay has been enabled in the IFC setup menu options. The seven segment LED will read "i dL" = Idle, no thermostat demand.

Periodic Servicing Requirements

1. GENERAL INSPECTION – *Examine the furnace installation annually for the following items:*
 - a. All flue product carrying areas external to the Furnace (i.e. chimney, vent connector) are clear and free of obstruction. A vent screen in the end of the Vent (flue) Pipe must be inspected for blockage annually, if applicable.
 - b. The vent connector is in place, slopes upward and is physically sound without holes or excessive corrosion.
 - c. The return air duct connection(s) is physically sound, is sealed to the Furnace and terminates outside the space containing the Furnace.
 - d. The physical support of the Furnace should be sound without sagging, cracks, gaps, etc., around the base so as to provide a seal between the support and the base.
2. FILTERS – Filters should be cleaned or replaced (with high velocity filters only), monthly and more frequently during high use times of the year such as midsummer or midwinter.
3. BLOWERS – The Blower size and speed determine the air volume delivered by the Furnace. The Blower motor bearings are factory lubricated and under normal operating conditions do not require servicing. Annual cleaning of the Blower wheel and housing is recommended for maximum air output, and this must be performed only by a qualified servicer or service agency.
4. IGNITER – This unit has a special hot surface direct ignition device that automatically lights the burners. Please note that it is very fragile and should be handled with care. ! CAUTION Do NOT touch igniter. It is extremely hot.
5. BURNER – Gas burners do not normally require scheduled servicing, however, accumulation of foreign material may cause a yellowing flame or delayed ignition. Either condition indicates that a service call is required. For best operation, burners must be cleaned annually using brushes and vacuum cleaner. Turn off gas and electric power supply. To clean burners, remove burner bottom plate (2 screws) and bottom burner bracket (2 screws). Twist burner towards slot, lift, and push forward away from orifice. Remove burners.

Alternate method — Remove manifold assembly, bottom burner plate, and bottom burner bracket. Remove burners.

Note: Be careful NOT to break igniter when removing burners.


Clean burners with brush and/ or vacuum cleaner. Reassemble parts by reversal of the above procedure.

Note: Natural gas units should not have any yellow tipped flames. This condition indicates that a service call is required. For best operation, burners must be cleaned annually using brushes and vacuum cleaner

Note: On Propane units, due to variations in BTU content and altitude, servicing may be required at shorter intervals.

6. HEAT EXCHANGER/ FLUE PIPE – These items must be inspected for signs of corrosion, and/ or deterioration at the beginning of each heating season by a qualified service technician and cleaned annually for best operation. To clean flue gas passages, follow recommendations below:
 - a. Turn off gas and electric power supply.
 - b. Inspect flue pipe exterior for cracks, leaks, holes or leaky joints. Some discoloration of PVC pipe is normal.
 - c. Remove door from Furnace.
 - d. Inspect around insulation covering flue collector box. Inspect induced draft Blower connections from recuperative cell and to the flue pipe connection.
 - e. Remove burners. (See 5. Burner)
 - f. Use a mirror and flashlight to inspect interior of Heat Exchanger, be careful not to damage the Igniter, Flame Sensor or other components.
 - g. If any corrosion is present, the Heat Exchanger should be cleaned by a qualified service technician.
 - h. After inspection is complete replace burners and Furnace door.
 - i. Restore gas supply. Check for leaks using a soap solution. Restore electrical supply. Check unit for normal operation.
7. COOLING COIL CONDENSATE DRAIN - If a cooling coil is installed with the Furnace, condensate drains should be checked and cleaned periodically to assure that condensate can drain freely from coil to drain. If condensate cannot drain freely water damage could occur. (See Condensate Drain in Installer's Guide.)

S9V2 Wiring Diagram

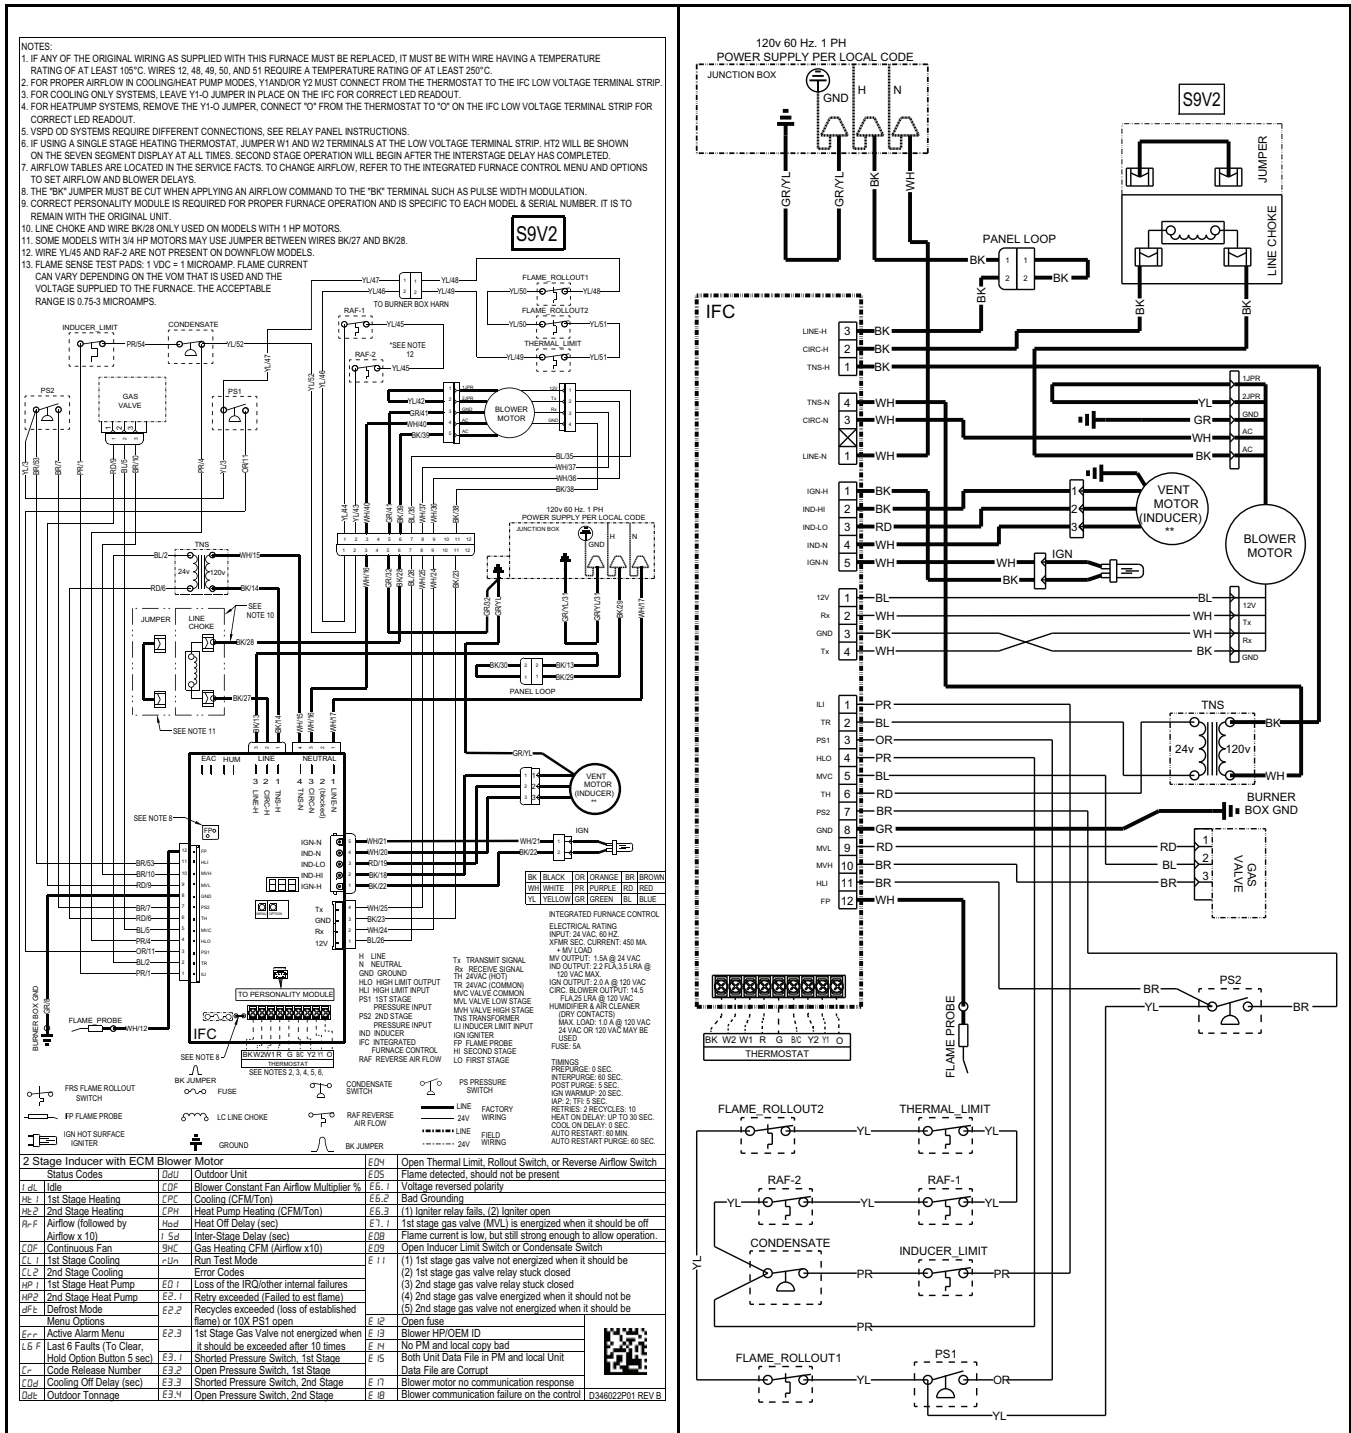

Heating and Cooling Airflow Tables

Table 1. S9V2B040U3PSBC Heating Airflow

S9V2B040U3PSBC Furnace Heating Airflow (CFM), Temp. Rise (°F), and Power (Watts) vs. External Static Pressure with Filter (iwc)								
				1st Stage Capacity = 25,300 2nd Stage Capacity = 38,950				
Heating	Airflow Setting	Target Airflow		External Static Pressure				
				0.1	0.3	0.5	0.7	0.9
Heating 1st Stage	Low	468	CFM	468	452	437	421	406
			Temp. Rise	49	51	54	56	58
			Watts	27	58	90	121	152
	Medium Low	598	CFM	552	600	647	694	741
			Temp. Rise	43	39	36	32	28
			Watts	41	76	112	147	183
	Medium (a)	634	CFM	583	635	687	739	791
			Temp. Rise	39	36	33	30	27
			Watts	48	83	118	153	189
	High	1008	CFM	930	905	879	853	828
			Temp. Rise	25	25	26	27	27
			Watts	125	178	232	285	339
Heating 2nd Stage	Low	650	CFM	633	636	639	643	646
			Temp. Rise	57	57	57	56	56
			Watts	48	92	135	179	223
	Medium Low	830	CFM	760	786	813	840	866
			Temp. Rise	48	46	45	43	41
			Watts	82	132	182	232	282
	Medium (a)	880	CFM	792	817	842	867	892
			Temp. Rise	44	44	43	43	42
			Watts	94	142	189	237	284
	High	1400	CFM	1337	1269	1200	1132	1063
			Temp. Rise	27	29	31	32	34
			Watts	335	376	417	458	499

(a) Factory Setting.

Table 2. S9V2B040U3PSBD Heating Airflow

S9V2B040U3PSBD Furnace Heating Airflow (CFM), Temp. Rise (°F), and Power (Watts) vs. External Static Pressure with Filter (iwc)								
				1st Stage Capacity = 25,300 2nd Stage Capacity = 38,950				
Heating	Airflow Setting	Target Airflow		External Static Pressure				
				0.1	0.3	0.5	0.7	0.9
Heating 1st Stage	Low	468	CFM	468	452	437	421	406
			Temp. Rise	49	51	54	56	58
			Watts	27	58	90	121	152
	Medium Low	598	CFM	552	600	647	694	741
			Temp. Rise	43	39	36	32	28
			Watts	41	76	112	147	183
	Medium (a)	634	CFM	583	635	687	739	791
			Temp. Rise	39	36	33	30	27
			Watts	48	83	118	153	189
	High	864	CFM	753	786	818	850	883
			Temp. Rise	30	29	28	27	26
			Watts	87	129	171	214	256
Heating 2nd Stage	Low	650	CFM	633	636	639	643	646
			Temp. Rise	57	57	57	56	56
			Watts	48	92	135	179	223
	Medium Low	830	CFM	760	786	813	840	866
			Temp. Rise	48	46	45	43	41
			Watts	82	132	182	232	282
	Medium (a)	880	CFM	792	817	842	867	892
			Temp. Rise	44	44	43	43	42
			Watts	94	142	189	237	284
	High	1200	CFM	1023	1044	1066	1088	1109
			Temp. Rise	34	34	33	33	32
			Watts	192	251	310	369	428

(a) Factory Setting.

Heating and Cooling Airflow Tables

Table 3. S9V2B040D3PSBC/D Heating Airflow

S9V2B040D3PSBC/D Furnace Heating Airflow (CFM), Temp. Rise (°F), and Power (Watts) vs. External Static Pressure with Filter (iwc)								
				1st Stage Capacity = 25,300 2nd Stage Capacity = 38,850				
Heating	Airflow Setting	Target Airflow		External Static Pressure				
				0.1	0.3	0.5	0.7	0.9
Heating 1st Stage	Low	468	CFM	464	453	442	431	420
			Temp. Rise	51	52	53	54	55
			Watts	26	55	84	113	142
	Medium Low ^(a)	634	CFM	616	607	599	591	583
			Temp. Rise	38	38	39	40	40
			Watts	40	78	115	152	190
	Medium	684	CFM	635	643	650	658	666
			Temp. Rise	37	37	36	36	35
			Watts	47	106	165	224	283
	High	900	CFM	824	843	861	880	898
			Temp. Rise	28	28	27	26	26
			Watts	82	130	178	226	274
Heating 2nd Stage	Low	650	CFM	662	655	649	642	635
			Temp. Rise	54	55	55	56	56
			Watts	37	79	120	162	203
	Medium Low ^(a)	880	CFM	811	818	826	834	841
			Temp. Rise	45	44	44	43	42
			Watts	67	121	176	230	284
	Medium	950	CFM	859	865	871	877	884
			Temp. Rise	42	41	41	41	41
			Watts	88	144	200	256	312
	High	1250	CFM	1082	1092	1102	1111	1121
			Temp. Rise	33	33	33	33	33
			Watts	192	253	314	375	436

^(a) Factory Setting.

Table 4. S9V2B040U3PSBC/D / S9V2B040D3PSBC/D Cooling Airflow

S9V2B040U3PSBC/D / S9V2B040D3PSBC/D Furnace Cooling Airflow (CFM) and Power (Watts) vs. External Static Pressure with Filter (iwc)								
Cooling	Unit Outdoor	Airflow Setting (CFM/ton)		External Static Pressure				
				0.1	0.3	0.5	0.7	0.9
Cooling	1.5 Ton	Cooling 450 CFM/Ton	CFM	675	675	675	675	675
			Watts	47	81	121	166	215
		Cooling 420 CFM/Ton	CFM	630	630	630	630	630
			Watts	40	72	111	154	202
		Cooling 400 CFM/Ton	CFM	600	600	600	600	600
			Watts	36	67	105	147	193
		Cooling 370 CFM/Ton	CFM	555	555	555	555	555
			Watts	30	60	96	136	181
		Cooling 350 CFM/Ton	CFM	525	525	525	525	525
			Watts	27	56	90	130	174
		Cooling 330 CFM/Ton	CFM	495	495	495	495	495
			Watts	24	51	85	124	167
		Cooling 310 CFM/Ton	CFM	465	465	465	465	465
			Watts	21	48	80	118	161
		Cooling 290 CFM/Ton	CFM	435	435	435	435	435
			Watts	19	44	76	113	155
Cooling	2.0 Ton	Cooling 450 CFM/Ton	CFM	900	900	900	900	900
			Watts	94	137	186	240	298
		Cooling 420 CFM/Ton	CFM	840	840	840	840	840
			Watts	79	120	166	218	273
		Cooling 400 CFM/Ton	CFM	800	800	800	800	800
			Watts	70	109	154	204	258
		Cooling 370 CFM/Ton	CFM	740	740	740	740	740
			Watts	58	95	138	185	236
		Cooling 350 CFM/Ton	CFM	700	700	700	700	700
			Watts	51	86	127	173	223
		Cooling 330 CFM/Ton	CFM	660	660	660	660	660
			Watts	44	78	118	162	211
		Cooling 310 CFM/Ton	CFM	620	620	620	620	620
			Watts	38	71	109	152	199
		Cooling 290 CFM/Ton	CFM	580	580	580	580	580
			Watts	33	64	101	142	188

Table 4. S9V2B040U3PSBC/D / S9V2B040D3PSBC/D Cooling Airflow (continued)

S9V2B040U3PSBC/D / S9V2B040D3PSBC/D Furnace Cooling Airflow (CFM) and Power (Watts) vs. External Static Pressure with Filter (iwc)								
Cooling	Unit Outdoor	Airflow Setting (CFM/ton)		External Static Pressure				
				0.1	0.3	0.5	0.7	0.9
Cooling	2.5 Ton	Cooling 450	CFM	1125	1125	1125	1125	1125
			CFM/Ton	Watts	167	219	278	341
		Cooling 420	CFM	1050	1050	1050	1050	1050
			CFM/Ton	Watts	139	188	244	304
		Cooling 400	CFM	1000	1000	1000	1000	1000
			CFM/Ton	Watts	123	170	223	281
		Cooling 370	CFM	925	925	925	925	925
			CFM/Ton	Watts	100	145	195	250
		Cooling 350	CFM	875	875	875	875	875
			CFM/Ton	Watts	87	129	178	230
		Cooling 330	CFM	825	825	825	825	825
			CFM/Ton	Watts	121	160	205	254
		Cooling 310	CFM	775	775	775	775	775
			CFM/Ton	Watts	101	139	182	229
Cooling 290	CFM	725	725	725	725	725		
	CFM/Ton	Watts	88	123	164	210	260	
Cooling	3.0 Ton (a)	Cooling 450	CFM	1350	1350	1350	1298	1198
			CFM/Ton	Watts	272	334	402	440
		Cooling 420	CFM	1260	1260	1260	1260	1198
			CFM/Ton	Watts	226	284	348	417
		Cooling 400	CFM	1200	1200	1200	1200	1198
			CFM/Ton	Watts	198	254	315	381
		Cooling 370	CFM	1110	1110	1110	1110	1110
			CFM/Ton	Watts	161	213	271	333
		Cooling 350	CFM	1050	1050	1050	1050	1050
			CFM/Ton (a)	Watts	139	188	244	304
		Cooling 330	CFM	990	990	990	990	990
			CFM/Ton	Watts	119	166	219	277
		Cooling 310	CFM	930	930	930	930	930
			CFM/Ton	Watts	102	146	197	252
Cooling 290	CFM	870	870	870	870	870		
	CFM/Ton	Watts	86	128	176	229	285	

(a) Factory Setting.

Table 5. S9V2B060D3PSBC/D Heating Airflow

S9V2B060D3PSBC/D Furnace Heating Airflow (CFM), Temp. Rise (°F), and Power (Watts) vs. External Static Pressure with Filter (iwc)								
				1st Stage Capacity = 37,700 2nd Stage Capacity = 57,850				
Heating	Airflow Setting	Target Airflow		External Static Pressure				
				0.1	0.3	0.5	0.7	0.9
Heating 1st Stage	Low	711	CFM	677	677	678	678	678
			Temp. Rise	52	52	52	52	52
			Watts	49	94	139	184	229
	Medium Low (a)	814	CFM	787	775	763	751	739
			Temp. Rise	45	46	47	48	49
			Watts	71	116	160	205	249
	Medium	893	CFM	865	856	846	837	827
			Temp. Rise	41	41	42	42	43
			Watts	86	134	182	230	278
	High	1067	CFM	1033	1013	994	974	955
			Temp. Rise	35	35	36	36	37
			Watts	141	193	245	297	349
Heating 2nd Stage	Low	900	CFM	859	856	853	850	847
			Temp. Rise	63	63	63	63	63
			Watts	90	139	188	237	287
	Medium Low (a)	1030	CFM	977	967	958	948	938
			Temp. Rise	55	56	57	57	58
			Watts	126	179	232	285	338
	Medium	1130	CFM	1067	1053	1040	1027	1013
			Temp. Rise	51	52	52	53	54
			Watts	162	219	275	332	388
	High	1350	CFM	1246	1234	1222	1209	1197
			Temp. Rise	44	44	44	45	45
			Watts	279	333	387	440	494

(a) Factory Setting.

Heating and Cooling Airflow Tables

Table 6. S9V2B060D3PSBC/D Cooling Airflow

S9V2B060D3PSBC/D Furnace Cooling Airflow (CFM) and Power (Watts) vs. External Static Pressure with Filter (iwc)								
Cooling	Unit Outdoor	Airflow Setting (CFM/ton)	External Static Pressure					
				0.1	0.3	0.5	0.7	0.9
Cooling	1.5 Ton	Cooling 450	CFM	672	674	672	666	656
		CFM/Ton	Watts	48	84	122	161	203
		Cooling 420	CFM	626	628	627	622	612
		CFM/Ton	Watts	41	76	112	150	190
		Cooling 400	CFM	595	598	597	592	583
		CFM/Ton	Watts	37	70	105	143	182
		Cooling 370	CFM	549	553	552	547	538
		CFM/Ton	Watts	32	63	97	133	171
		Cooling 350	CFM	518	522	522	518	509
		CFM/Ton	Watts	29	59	91	126	164
		Cooling 330	CFM	487	492	492	488	479
		CFM/Ton	Watts	26	55	86	121	158
		Cooling 310	CFM	456	461	462	458	449
		CFM/Ton	Watts	23	51	81	115	153
Cooling 290	CFM	425	431	432	428	420		
CFM/Ton	Watts	21	47	77	111	148		
Cooling	2.0 Ton	Cooling 450	CFM	894	891	882	871	873
		CFM/Ton	Watts	91	137	182	228	282
		Cooling 420	CFM	838	839	835	827	816
		CFM/Ton	Watts	78	122	166	212	259
		Cooling 400	CFM	798	799	795	788	778
		CFM/Ton	Watts	70	112	155	199	244
		Cooling 370	CFM	737	739	736	730	719
		CFM/Ton	Watts	58	98	138	180	223
		Cooling 350	CFM	697	699	697	690	680
		CFM/Ton	Watts	52	89	128	168	211
		Cooling 330	CFM	656	659	657	651	641
		CFM/Ton	Watts	46	81	118	157	199
		Cooling 310	CFM	616	618	617	612	602
		CFM/Ton	Watts	40	74	110	147	187
Cooling 290	CFM	575	578	577	572	563		
CFM/Ton	Watts	35	67	101	138	177		
Cooling	2.5 Ton	Cooling 450	CFM	1120	1117	1111	1102	1089
		CFM/Ton	Watts	162	218	275	332	390
		Cooling 420	CFM	1037	1035	1029	1020	1008
		CFM/Ton	Watts	132	185	238	291	346
		Cooling 400	CFM	997	996	991	982	970
		CFM/Ton	Watts	120	171	222	274	327
		Cooling 370	CFM	923	923	918	910	898
		CFM/Ton	Watts	99	146	194	243	293
		Cooling 350	CFM	873	873	869	861	850
		CFM/Ton	Watts	86	132	177	224	273
		Cooling 330	CFM	823	824	820	813	802
		CFM/Ton	Watts	75	118	162	207	253
		Cooling 310	CFM	773	774	771	764	754
		CFM/Ton	Watts	65	106	147	191	235
Cooling 290	CFM	722	724	721	715	705		
CFM/Ton	Watts	56	94	134	175	218		
Cooling	3.0 Ton (a)	Cooling 450	CFM	1336	1332	1324	1313	1299
		CFM/Ton	Watts	263	329	395	462	529
		Cooling 420	CFM	1250	1247	1239	1229	1216
		CFM/Ton	Watts	218	280	343	406	470
		Cooling 400	CFM	1193	1189	1183	1173	1159
		CFM/Ton	Watts	191	251	311	372	433
		Cooling 370	CFM	1105	1103	1097	1087	1075
		CFM/Ton	Watts	156	212	268	325	382
		Cooling 350	CFM	1046	1045	1039	1030	1018
		CFM/Ton (a)	Watts	135	189	242	296	351
		Cooling 330	CFM	987	986	981	973	961
		CFM/Ton	Watts	117	167	218	270	322
		Cooling 310	CFM	928	927	923	915	903
		CFM/Ton	Watts	100	148	196	245	295
Cooling 290	CFM	868	868	864	857	845		
CFM/Ton	Watts	85	130	176	223	271		

(a) Factory Setting.

Table 7. S9V2B060U4PSBC/D Heating Airflow

S9V2B060U4PSBC/D Furnace Heating Airflow (CFM), Temp. Rise (°F), and Power (Watts) vs. External Static Pressure with Filter (iwc)								
				1st Stage Capacity = 38,100 2nd Stage Capacity = 58,400				
Heating	Airflow Setting	Target Airflow		External Static Pressure				
				0.1	0.3	0.5	0.7	0.9
Heating 1st Stage	Low	782	CFM	776	769	762	756	749
			Temp. Rise	45	45	45	45	46
			Watts	70	109	149	188	227
	Medium Low	861	CFM	842	823	805	786	768
			Temp. Rise	42	43	43	44	44
			Watts	88	126	164	202	240
	Medium (a)	916	CFM	863	860	858	855	853
			Temp. Rise	41	41	41	41	41
			Watts	105	143	181	219	257
	High	1027	CFM	1105	1084	1063	1042	1021
			Temp. Rise	32	32	33	34	34
			Watts	135	173	210	248	285
Heating 2nd Stage	Low	990	CFM	1002	996	990	984	979
			Temp. Rise	55	55	55	55	55
			Watts	126	172	219	266	313
	Medium Low	1090	CFM	1130	1117	1105	1092	1079
			Temp. Rise	49	49	49	50	50
			Watts	160	206	253	300	347
	Medium (a)	1160	CFM	1139	1133	1128	1122	1116
			Temp. Rise	48	48	49	49	49
			Watts	181	231	281	331	381
	High	1300	CFM	1319	1307	1295	1283	1272
			Temp. Rise	41	42	42	42	43
			Watts	246	300	353	407	461

(a) Factory Setting.

Table 8. S9V2B060U4PSBC/D Cooling Airflow

S9V2B060U4PSBC/D Furnace Cooling Airflow (CFM) and Power (Watts) vs. External Static Pressure with Filter (iwc)										
Cooling	Unit Outdoor	Airflow Setting (CFM/ton)		External Static Pressure						
				0.1	0.3	0.5	0.7	0.9		
Cooling	1.5 Ton	Cooling 450 CFM/Ton	CFM	663	673	666	641	596		
			Watts	47	83	119	155	192		
		Cooling 420 CFM/Ton	CFM	621	630	621	595	549		
			Watts	41	75	109	144	180		
		Cooling 400 CFM/Ton	CFM	582	580	566	528	507		
			Watts	36	67	99	130	170		
		Cooling 370 CFM/Ton	CFM	549	556	546	517	469		
			Watts	32	63	95	128	162		
		Cooling 350 CFM/Ton	CFM	521	527	516	486	437		
			Watts	29	59	90	122	156		
		Cooling 330 CFM/Ton	CFM	492	497	486	455	405		
			Watts	26	55	85	117	150		
		Cooling 310 CFM/Ton	CFM	463	468	455	423	372		
			Watts	23	51	81	112	145		
		Cooling 290 CFM/Ton	CFM	435	438	424	391	339		
			Watts	21	48	77	107	141		
		Cooling	2.0 Ton	Cooling 450 CFM/Ton	CFM	878	893	890	869	829
					Watts	90	135	179	223	266
Cooling 420 CFM/Ton	CFM			821	834	830	808	767		
	Watts			76	119	161	202	244		
Cooling 400 CFM/Ton	CFM			770	778	770	742	725		
	Watts			66	105	144	182	230		
Cooling 370 CFM/Ton	CFM			725	737	731	707	664		
	Watts			57	96	134	172	211		
Cooling 350 CFM/Ton	CFM			687	698	691	666	622		
	Watts			51	88	124	161	199		
Cooling 330 CFM/Ton	CFM			649	659	651	625	580		
	Watts			45	80	115	151	188		
Cooling 310 CFM/Ton	CFM			611	620	611	584	538		
	Watts			39	73	107	142	177		
Cooling 290 CFM/Ton	CFM			573	581	571	543	496		
	Watts			34	67	99	133	168		

Heating and Cooling Airflow Tables

Table 8. S9V2B060U4PSBC/D Cooling Airflow (continued)

S9V2B060U4PSBC/D Furnace Cooling Airflow (CFM) and Power (Watts) vs. External Static Pressure with Filter (iwc)								
Cooling	Unit Outdoor	Airflow Setting (CFM/ton)	External Static Pressure					
				0.1	0.3	0.5	0.7	0.9
Cooling	2.5 Ton	Cooling 450	CFM	1097	1114	1114	1097	1061
		CFM/Ton	Watts	159	212	265	317	368
		Cooling 420	CFM	1023	1040	1039	1020	984
		CFM/Ton	Watts	133	184	233	282	331
		Cooling 400	CFM	976	989	990	970	932
		CFM/Ton	Watts	117	166	214	261	308
		Cooling 370	CFM	902	917	915	894	855
		CFM/Ton	Watts	97	142	187	232	276
		Cooling 350	CFM	854	868	865	843	803
		CFM/Ton	Watts	84	128	171	214	257
		Cooling 330	CFM	806	819	815	793	752
		CFM/Ton	Watts	73	115	157	198	239
		Cooling 310	CFM	759	771	766	742	700
		CFM/Ton	Watts	63	103	143	182	222
Cooling 290	CFM	711	722	716	692	648		
CFM/Ton	Watts	55	93	130	168	206		
Cooling	3.0 Ton	Cooling 450	CFM	1319	1340	1343	1328	1295
		CFM/Ton	Watts	260	321	382	441	501
		Cooling 420	CFM	1229	1249	1251	1235	1201
		CFM/Ton	Watts	215	274	331	387	443
		Cooling 400	CFM	1170	1189	1190	1173	1139
		CFM/Ton	Watts	189	245	300	354	408
		Cooling 370	CFM	1082	1100	1099	1081	1046
		CFM/Ton	Watts	154	206	258	309	360
		Cooling 350	CFM	1023	1040	1039	1020	984
		CFM/Ton	Watts	133	184	233	282	331
		Cooling 330	CFM	965	981	979	960	922
		CFM/Ton	Watts	114	163	210	257	304
		Cooling 310	CFM	907	922	919	899	860
		CFM/Ton	Watts	98	144	189	234	278
Cooling 290	CFM	850	863	860	838	798		
CFM/Ton	Watts	83	127	170	212	255		
Cooling	3.5 Ton	Cooling 450	CFM	1546	1570	1576	1564	1534
		CFM/Ton	Watts	399	469	537	604	671
		Cooling 420	CFM	1440	1462	1466	1453	1422
		CFM/Ton	Watts	329	395	459	523	586
		Cooling 400	CFM	1369	1391	1394	1380	1348
		CFM/Ton	Watts	287	350	413	474	535
		Cooling 370	CFM	1264	1284	1287	1271	1238
		CFM/Ton	Watts	232	291	350	408	465
		Cooling 350	CFM	1195	1214	1215	1199	1165
		CFM/Ton	Watts	199	257	313	368	423
		Cooling 330	CFM	1126	1144	1145	1127	1092
		CFM/Ton	Watts	170	225	278	331	384
		Cooling 310	CFM	1059	1075	1074	1056	1020
		CFM/Ton	Watts	145	197	248	298	348
Cooling 290	CFM	992	1006	1004	985	948		
CFM/Ton	Watts	122	171	219	267	315		
Cooling	4.0 Ton (a)	Cooling 450	CFM	1779	1806	1814	1805	1778
		CFM/Ton	Watts	585	661	737	812	886
		Cooling 420	CFM	1654	1679	1686	1676	1647
		CFM/Ton	Watts	480	552	624	695	765
		Cooling 400	CFM	1572	1596	1602	1590	1561
		CFM/Ton	Watts	418	488	557	625	693
		Cooling 370	CFM	1450	1472	1477	1464	1433
		CFM/Ton	Watts	335	401	466	530	594
		Cooling 350	CFM	1369	1391	1394	1380	1348
		CFM/Ton (a)	Watts	287	350	413	474	535
		Cooling 330	CFM	1289	1310	1312	1297	1264
		CFM/Ton	Watts	244	305	364	423	481
		Cooling 310	CFM	1210	1229	1231	1214	1180
		CFM/Ton	Watts	206	264	320	376	431
Cooling 290	CFM	1131	1149	1150	1132	1097		
CFM/Ton	Watts	172	227	281	334	386		

(a) Factory Setting.

Table 9. S9V2B080U4PSBC/D Heating Airflow

S9V2B080U4PSBC/D Furnace Heating Airflow (CFM), Temp. Rise (°F), and Power (Watts) vs. External Static Pressure with Filter (iwc)				1st Stage Capacity = 50,500 2nd Stage Capacity = 77,700				
Heating	Airflow Setting	Target Airflow		External Static Pressure				
				0.1	0.3	0.5	0.7	0.9
Heating 1st Stage	Low	864	CFM	914	882	849	816	783
			Temp. Rise	51	53	55	57	59
			Watts	90	131	172	213	255
	Medium Low ^(a)	907	CFM	940	912	885	858	831
			Temp. Rise	50	51	53	54	56
			Watts	104	141	178	215	253
	Medium	958	CFM	983	932	881	830	779
			Temp. Rise	47	50	53	55	58
			Watts	118	151	184	218	251
	High	1051	CFM	1029	1068	1107	1146	1185
			Temp. Rise	45	44	42	40	39
			Watts	155	195	235	275	314
Heating 2nd Stage	Low	1200	CFM	1207	1206	1205	1204	1203
			Temp. Rise	60	60	60	60	60
			Watts	206	258	309	361	412
	Medium Low ^(a)	1260	CFM	1260	1261	1262	1263	1264
			Temp. Rise	57	57	57	57	57
			Watts	232	287	342	397	452
	Medium	1330	CFM	1360	1347	1333	1320	1306
			Temp. Rise	53	53	54	54	55
			Watts	263	322	380	439	497
	High	1460	CFM	1420	1439	1458	1477	1496
			Temp. Rise	51	50	49	49	48
			Watts	377	433	489	546	602

^(a) Factory Setting.

Table 10. S9V2B080D4PSBC/D Heating Airflow

S9V2B080D4PSBC/D Furnace Heating Airflow (CFM), Temp. Rise (°F), and Power (Watts) vs. External Static Pressure with Filter (iwc)				1st Stage Capacity = 50,300 2nd Stage Capacity = 77,350				
Heating	Airflow Setting	Target Airflow		External Static Pressure				
				0.1	0.3	0.5	0.7	0.9
Heating 1st Stage	Low	864	CFM	808	795	782	770	757
			Temp. Rise	58	59	60	61	62
			Watts	82	126	171	216	261
	Medium Low	907	CFM	836	823	810	797	784
			Temp. Rise	56	57	58	59	60
			Watts	94	137	180	223	266
	Medium ^(a)	958	CFM	896	881	866	851	836
			Temp. Rise	51	53	54	56	57
			Watts	110	153	196	238	281
	High	1066	CFM	977	963	949	934	920
			Temp. Rise	48	49	50	51	52
			Watts	128	179	230	281	332
Heating 2nd Stage	Low	1200	CFM	1125	1104	1082	1061	1039
			Temp. Rise	64	65	67	68	69
			Watts	191	241	292	342	392
	Medium Low	1260	CFM	1188	1162	1135	1109	1082
			Temp. Rise	61	62	64	65	66
			Watts	219	273	326	380	434
	Medium ^(a)	1330	CFM	1243	1220	1197	1174	1151
			Temp. Rise	58	59	60	61	62
			Watts	259	309	360	410	461
	High	1480	CFM	1342	1328	1313	1299	1284
			Temp. Rise	53	54	55	56	56
			Watts	329	389	448	508	567

^(a) Factory Setting.

Heating and Cooling Airflow Tables

Table 11. S9V2B080U4PSBC/D / S9V2B080D4PSBC/D Cooling Airflow

S9V2B080U4PSBC/D / S9V2B080D4PSBC/D Furnace Cooling Airflow (CFM) and Power (Watts) vs. External Static Pressure with Filter								
Cooling	Unit Outdoor	Airflow Setting (CFM/ton)		External Static Pressure				
				0.1	0.3	0.5	0.7	0.9
Cooling	2.0 Ton	Cooling 450	CFM	892	899	893	872	838
		CFM/Ton	Watts	91	136	180	222	265
		Cooling 420	CFM	834	841	834	813	777
		CFM/Ton	Watts	77	120	161	202	243
		Cooling 400	CFM	785	785	781	754	737
		CFM/Ton	Watts	67	106	146	183	229
		Cooling 370	CFM	738	744	736	714	677
		CFM/Ton	Watts	58	97	134	172	210
		Cooling 350	CFM	700	705	697	675	638
		CFM/Ton	Watts	52	89	125	161	198
		Cooling 330	CFM	662	666	658	635	598
		CFM/Ton	Watts	46	81	116	151	187
Cooling 310	CFM	624	627	619	596	558		
CFM/Ton	Watts	40	74	107	142	177		
Cooling 290	CFM	585	588	580	557	518		
CFM/Ton	Watts	35	67	100	133	168		
Cooling	2.5 Ton	Cooling 450	CFM	1108	1120	1116	1098	1065
		CFM/Ton	Watts	159	213	265	315	365
		Cooling 420	CFM	1035	1046	1041	1022	989
		CFM/Ton	Watts	133	184	233	281	328
		Cooling 400	CFM	988	997	992	972	938
		CFM/Ton	Watts	118	167	214	260	306
		Cooling 370	CFM	916	924	918	897	863
		CFM/Ton	Watts	97	143	188	231	275
		Cooling 350	CFM	868	875	868	848	813
		CFM/Ton	Watts	85	129	172	213	255
		Cooling 330	CFM	820	826	819	798	762
		CFM/Ton	Watts	74	116	157	197	237
Cooling 310	CFM	772	778	770	749	712		
CFM/Ton	Watts	64	104	143	182	221		
Cooling 290	CFM	724	729	721	699	663		
CFM/Ton	Watts	56	94	131	168	205		
Cooling	3.0 Ton	Cooling 450	CFM	1326	1341	1341	1325	1296
		CFM/Ton	Watts	257	320	380	439	497
		Cooling 420	CFM	1239	1252	1250	1234	1203
		CFM/Ton	Watts	214	273	330	385	440
		Cooling 400	CFM	1181	1193	1191	1173	1142
		CFM/Ton	Watts	188	245	299	353	405
		Cooling 370	CFM	1094	1105	1101	1083	1050
		CFM/Ton	Watts	153	207	258	308	358
		Cooling 350	CFM	1036	1046	1041	1022	989
		CFM/Ton	Watts	133	184	233	281	329
		Cooling 330	CFM	978	987	982	962	928
		CFM/Ton	Watts	115	164	210	256	302
Cooling 310	CFM	920	929	923	902	868		
CFM/Ton	Watts	99	145	189	233	277		
Cooling 290	CFM	863	870	863	843	807		
CFM/Ton	Watts	84	128	170	212	253		
Cooling	3.5 Ton	Cooling 450	CFM	1547	1565	1568	1556	1529
		CFM/Ton	Watts	392	463	531	598	664
		Cooling 420	CFM	1443	1460	1462	1448	1420
		CFM/Ton	Watts	324	391	456	519	581
		Cooling 400	CFM	1375	1391	1391	1376	1347
		CFM/Ton	Watts	284	348	410	471	530
		Cooling 370	CFM	1273	1287	1286	1269	1239
		CFM/Ton	Watts	230	290	349	405	461
		Cooling 350	CFM	1205	1218	1215	1199	1167
		CFM/Ton	Watts	198	256	312	366	420
		Cooling 330	CFM	1137	1149	1146	1128	1096
		CFM/Ton	Watts	170	225	278	330	381
Cooling 310	CFM	1069	1080	1076	1057	1024		
CFM/Ton	Watts	145	197	248	297	345		
Cooling 290	CFM	1002	1012	1007	987	954		
CFM/Ton	Watts	122	172	220	266	313		

Table 11. S9V2B080U4PSBC/D / S9V2B080D4PSBC/D Cooling Airflow (continued)

S9V2B080U4PSBC/D / S9V2B080D4PSBC/D Furnace Cooling Airflow (CFM) and Power (Watts) vs. External Static Pressure with Filter								
Cooling	Unit Outdoor	Airflow Setting (CFM/ton)		External Static Pressure				
				0.1	0.3	0.5	0.7	0.9
Cooling	4.0 Ton (a)	Cooling 450	CFM	1769	1791	1797	1789	1766
			Watts	570	648	725	799	873
		Cooling 420	CFM	1650	1670	1675	1664	1639
			Watts	469	544	616	686	756
		Cooling 400	CFM	1571	1590	1593	1582	1555
			Watts	410	481	550	618	685
		Cooling 370	CFM	1453	1470	1472	1458	1430
			Watts	330	397	462	526	588
		Cooling 350	CFM	1375	1391	1391	1376	1347
			CFM/Ton (a)	Watts	284	348	410	471
		Cooling 330	CFM	1297	1312	1311	1295	1265
			Watts	242	303	363	420	477
		Cooling 310	CFM	1219	1233	1230	1214	1183
			Watts	205	263	319	374	428
Cooling 290	CFM	1142	1154	1151	1133	1101		
	Watts	172	227	280	332	384		

(a) Factory Setting.

Table 12. S9V2C080U5PSBC Heating Airflow

S9V2C080U5PSBC Furnace Heating Airflow (CFM), Temp. Rise (°F), and Power (Watts) vs. External Static Pressure with Filter (iwc)								
				1st Stage Capacity = 50,600 2nd Stage Capacity = 77,750				
Heating	Airflow Setting	Target Airflow		External Static Pressure				
				0.1	0.3	0.5	0.7	0.9
Heating 1st Stage	Low	857	CFM	837	870	902	934	967
			Temp. Rise	55	53	51	50	48
			Watts	65	112	160	208	256
	Medium Low (a)	1044	CFM	997	1015	1033	1050	1068
			Temp. Rise	46	45	45	44	43
			Watts	102	155	209	263	316
	Medium	1123	CFM	1067	1094	1121	1148	1175
			Temp. Rise	43	42	41	40	39
			Watts	123	180	236	293	350
	High	1498	CFM	1420	1416	1411	1407	1402
			Temp. Rise	32	33	33	33	34
			Watts	238	320	402	485	567
Heating 2nd Stage	Low	1190	CFM	1129	1148	1168	1188	1208
			Temp. Rise	63	62	61	60	59
			Watts	127	195	263	331	399
	Medium Low (a)	1450	CFM	1387	1395	1404	1412	1420
			Temp. Rise	52	51	51	51	51
			Watts	248	310	372	434	496
	Medium	1560	CFM	1484	1498	1512	1525	1539
			Temp. Rise	48	48	47	47	47
			Watts	281	358	435	512	589
	High	2080	CFM	1954	1956	1959	1961	1964
			Temp. Rise	37	37	37	37	37
			Watts	597	732	866	1001	1135

(a) Factory Setting.

Heating and Cooling Airflow Tables

Table 13. S9V2C080U5PSBD Heating Airflow

S9V2C080U5PSBD Furnace Heating Airflow (CFM), Temp. Rise (°F), and Power (Watts) vs. External Static Pressure with Filter (iwc)								
				1st Stage Capacity = 50,600 2nd Stage Capacity = 77,750				
Heating	Airflow Setting	Target Airflow		External Static Pressure				
				0.1	0.3	0.5	0.7	0.9
Heating 1st Stage	Low	857	CFM	838	821	804	788	771
			Temp. Rise	56	57	57	58	59
			Watts	68	109	151	192	234
	Medium Low ^(a)	1044	CFM	967	993	1019	1045	1070
			Temp. Rise	48	47	46	45	44
			Watts	91	145	198	252	306
	Medium	1123	CFM	1060	1058	1056	1053	1051
			Temp. Rise	44	44	44	43	43
			Watts	108	165	222	279	335
	High	1224	CFM	1266	1171	1075	980	884
			Temp. Rise	36	40	43	46	50
			Watts	134	194	253	313	373
Heating 2nd Stage	Low	1190	CFM	1114	1127	1141	1154	1167
			Temp. Rise	64	63	62	62	61
			Watts	127	188	250	312	373
	Medium Low ^(a)	1450	CFM	1359	1378	1396	1414	1432
			Temp. Rise	52	52	51	50	49
			Watts	216	291	365	439	514
	Medium	1560	CFM	1466	1474	1482	1490	1497
			Temp. Rise	48	48	48	48	48
			Watts	263	344	426	507	588
	High	1700	CFM	1774	1731	1689	1647	1605
			Temp. Rise	40	41	42	43	44
			Watts	356	437	518	600	681

^(a) Factory Setting.

Table 14. S9V2C080U5PSBC/D Cooling Airflow

S9V2C080U5PSBC/D Furnace Cooling Airflow (CFM) and Power (Watts) vs. External Static Pressure with Filter (iwc)										
Cooling	Unit Outdoor	Airflow Setting (CFM/ton)		External Static Pressure						
				0.1	0.3	0.5	0.7	0.9		
Cooling	3.0 Ton	Cooling 450 CFM/Ton	CFM	1335	1347	1356	1362	1366		
			Watts	182	241	303	366	431		
		Cooling 420 CFM/Ton	CFM	1246	1259	1267	1273	1277		
			Watts	152	208	266	326	387		
		Cooling 400 CFM/Ton	CFM	1188	1200	1208	1214	1217		
			Watts	134	188	243	301	360		
		Cooling 370 CFM/Ton	CFM	1100	1111	1118	1123	1125		
			Watts	110	160	212	266	322		
		Cooling 350 CFM/Ton	CFM	1041	1052	1058	1061	1063		
			Watts	96	143	193	245	299		
		Cooling 330 CFM/Ton	CFM	983	993	997	999	1000		
			Watts	83	128	176	225	277		
		Cooling 310 CFM/Ton	CFM	925	933	936	937	936		
			Watts	72	114	159	207	257		
		Cooling 290 CFM/Ton	CFM	867	873	874	873	871		
			Watts	61	101	144	190	239		
		Cooling	3.5 Ton	Cooling 450 CFM/Ton	CFM	1557	1568	1576	1581	1585
					Watts	273	342	413	486	559
Cooling 420 CFM/Ton	CFM			1453	1465	1473	1480	1483		
	Watts			228	292	359	427	496		
Cooling 400 CFM/Ton	CFM			1384	1396	1405	1411	1415		
	Watts			200	262	325	391	457		
Cooling 370 CFM/Ton	CFM			1281	1293	1302	1308	1312		
	Watts			163	221	280	341	404		
Cooling 350 CFM/Ton	CFM			1212	1224	1233	1239	1242		
	Watts			142	196	253	311	371		
Cooling 330 CFM/Ton	CFM			1144	1155	1163	1168	1171		
	Watts			122	173	227	283	341		
Cooling 310 CFM/Ton	CFM			1076	1086	1093	1097	1099		
	Watts			104	153	204	257	312		
Cooling 290 CFM/Ton	CFM			1007	1017	1023	1025	1026		
	Watts			88	134	183	233	286		

Table 14. S9V2C080U5PSBC/D Cooling Airflow (continued)

S9V2C080U5PSBC/D Furnace Cooling Airflow (CFM) and Power (Watts) vs. External Static Pressure with Filter (iwc)								
Cooling	Unit Outdoor	Airflow Setting (CFM/ton)	External Static Pressure					
			0.1	0.3	0.5	0.7	0.9	
Cooling	4.0 Ton	Cooling 450 CFM/Ton	CFM	1782	1789	1794	1797	1798
		Watts	392	471	551	632	715	
		Cooling 420 CFM/Ton	CFM	1662	1671	1678	1682	1685
		Watts	325	399	474	550	628	
		Cooling 400 CFM/Ton	CFM	1582	1592	1600	1606	1609
		Watts	285	355	427	500	575	
		Cooling 370 CFM/Ton	CFM	1463	1474	1483	1489	1493
		Watts	232	297	364	432	502	
		Cooling 350 CFM/Ton	CFM	1384	1396	1405	1411	1415
		Watts	200	262	325	391	457	
		Cooling 330 CFM/Ton	CFM	1305	1317	1327	1333	1337
		Watts	172	230	290	352	416	
		Cooling 310 CFM/Ton	CFM	1227	1239	1248	1254	1257
		Watts	146	201	258	317	378	
Cooling 290 CFM/Ton	CFM	1149	1160	1168	1173	1176		
Watts	123	175	229	285	343			
Cooling	4.5 Ton	Cooling 450 CFM/Ton	CFM	2008	2011	2012	2011	2008
		Watts	542	630	719	811	903	
		Cooling 420 CFM/Ton	CFM	1872	1878	1881	1883	1882
		Watts	448	530	614	700	786	
		Cooling 400 CFM/Ton	CFM	1782	1789	1794	1797	1798
		Watts	392	471	551	632	715	
		Cooling 370 CFM/Ton	CFM	1647	1656	1663	1668	1670
		Watts	318	390	465	541	618	
		Cooling 350 CFM/Ton	CFM	1557	1568	1576	1581	1585
		Watts	273	342	413	486	559	
		Cooling 330 CFM/Ton	CFM	1468	1479	1488	1494	1498
		Watts	234	299	366	435	505	
		Cooling 310 CFM/Ton	CFM	1379	1391	1400	1407	1410
		Watts	198	260	323	388	455	
Cooling 290 CFM/Ton	CFM	1291	1303	1312	1318	1322		
Watts	167	224	284	346	409			
Cooling	5.0 Ton ^(a)	Cooling 450 CFM/Ton	CFM	2235	2233	2230	2224	2216
		Watts	726	824	923	1023	1125	
		Cooling 420 CFM/Ton	CFM	2084	2085	2084	2082	2078
		Watts	599	690	783	877	973	
		Cooling 400 CFM/Ton	CFM	1983	1986	1988	1988	1985
		Watts	524	611	699	789	880	
		Cooling 370 CFM/Ton	CFM	1832	1838	1843	1845	1845
		Watts	423	503	586	669	754	
		Cooling 350 CFM/Ton ^(a)	CFM	1732	1740	1746	1749	1751
		Watts	363	440	518	597	678	
		Cooling 330 CFM/Ton	CFM	1632	1641	1649	1654	1656
		Watts	310	382	456	531	608	
		Cooling 310 CFM/Ton	CFM	1533	1543	1551	1557	1561
		Watts	262	330	400	471	544	
Cooling 290 CFM/Ton	CFM	1434	1445	1454	1460	1464		
Watts	219	283	349	416	485			

^(a) Factory Setting.

Heating and Cooling Airflow Tables

Table 15. S9V2C100U5PSBC/D Heating Airflow

S9V2C100U5PSBC/D Furnace Heating Airflow (CFM), Temp. Rise (°F), and Power (Watts) vs. External Static Pressure with Filter (iwc)								
				1st Stage Capacity = 63,400 2nd Stage Capacity = 97,650				
Heating	Airflow Setting	Target Airflow		External Static Pressure				
				0.1	0.3	0.5	0.7	0.9
Heating 1st Stage	Low	1145	CFM	1111	1097	1083	1068	1054
			Temp. Rise	52	52	52	52	53
			Watts	135	184	234	283	333
	Medium Low	1426	CFM	1393	1383	1372	1362	1352
			Temp. Rise	41	41	42	42	42
			Watts	232	286	340	394	447
	Medium (a)	1483	CFM	1451	1447	1443	1438	1434
			Temp. Rise	39	40	40	40	40
			Watts	260	310	360	410	460
	High	1548	CFM	1495	1477	1458	1439	1421
			Temp. Rise	38	39	39	40	40
			Watts	285	352	419	486	553
Heating 2nd Stage	Low	1590	CFM	1564	1550	1536	1522	1508
			Temp. Rise	58	58	58	58	59
			Watts	323	397	470	544	618
	Medium Low	1980	CFM	1959	1936	1913	1891	1868
			Temp. Rise	46	46	47	47	47
			Watts	597	681	764	847	930
	Medium (a)	2060	CFM	2047	2034	2021	2008	1995
			Temp. Rise	44	44	44	45	45
			Watts	655	737	818	900	982
	High	2150	CFM	2102	2087	2073	2058	2044
			Temp. Rise	43	43	43	44	44
			Watts	745	801	857	913	969

(a) Factory Setting.

Table 16. S9V2C100D5PSBC/D Heating Airflow

S9V2C100D5PSBC/D Furnace Heating Airflow (CFM), Temp. Rise (°F), and Power (Watts) vs. External Static Pressure with Filter (iwc)								
				1st Stage Capacity = 63,300 2nd Stage Capacity = 97,150				
Heating	Airflow Setting	Target Airflow		External Static Pressure				
				0.1	0.3	0.5	0.7	0.9
Heating 1st Stage	Low	1094	CFM	1093	1092	1090	1089	1088
			Temp. Rise	53	53	53	52	52
			Watts	126	183	240	296	353
	Medium Low	1296	CFM	1234	1238	1242	1247	1251
			Temp. Rise	47	47	47	47	47
			Watts	186	243	299	356	413
	Medium (a)	1346	CFM	1279	1268	1256	1245	1234
			Temp. Rise	45	45	46	46	47
			Watts	214	268	321	375	428
	High	1512	CFM	1453	1429	1405	1381	1358
			Temp. Rise	40	40	41	41	42
			Watts	277	344	411	478	545
Heating 2nd Stage	Low	1520	CFM	1484	1477	1469	1461	1453
			Temp. Rise	60	60	61	61	61
			Watts	296	370	444	518	592
	Medium Low	1800	CFM	1693	1688	1684	1679	1674
			Temp. Rise	53	53	53	53	53
			Watts	449	533	618	702	786
	Medium (a)	1870	CFM	1768	1772	1775	1778	1781
			Temp. Rise	51	50	50	50	50
			Watts	505	591	678	765	852
	High	2100	CFM	1969	1956	1944	1931	1918
			Temp. Rise	45	45	46	46	46
			Watts	723	789	854	920	986

(a) Factory Setting.

Table 17. S9V2C100U5PSBC/D / S9V2C100D5PSBC/D Cooling Airflow

S9V2C100U5PSBC/D / S9V2C100D5PSBC/D Furnace Cooling Airflow (CFM) and Power (Watts) vs. External Static Pressure with Filter (iwc)								
Cooling	Unit Outdoor	Airflow Setting (CFM/ton)	External Static Pressure					
				0.1	0.3	0.5	0.7	0.9
Cooling	2.5 Ton	Cooling 450	CFM	1153	1149	1147	1145	1141
		CFM/Ton	Watts	111	159	208	260	314
		Cooling 420	CFM	1077	1073	1071	1068	1064
		CFM/Ton	Watts	94	138	185	235	287
		Cooling 400	CFM	1061	1057	1054	1044	1021
		CFM/Ton	Watts	90	134	180	227	273
		Cooling 370	CFM	950	945	942	939	935
		CFM/Ton	Watts	69	109	151	197	246
		Cooling 350	CFM	899	893	890	887	882
		CFM/Ton	Watts	60	98	140	184	232
		Cooling 330	CFM	848	841	838	835	830
		CFM/Ton	Watts	53	89	129	172	219
Cooling	3.0 Ton	Cooling 310	CFM	796	789	786	782	777
		CFM/Ton	Watts	46	80	119	161	208
		Cooling 290	CFM	745	737	733	729	724
		CFM/Ton	Watts	39	72	110	151	198
		Cooling 450	CFM	1378	1376	1374	1372	1368
		CFM/Ton	Watts	178	234	292	352	413
		Cooling 420	CFM	1289	1286	1284	1282	1277
		CFM/Ton	Watts	149	201	256	312	371
		Cooling 400	CFM	1228	1225	1223	1221	1217
		CFM/Ton	Watts	131	181	234	288	345
		Cooling 370	CFM	1138	1134	1132	1130	1125
		CFM/Ton	Watts	108	154	203	255	309
Cooling	3.5 Ton	Cooling 350	CFM	1077	1073	1071	1068	1064
		CFM/Ton	Watts	94	138	185	235	287
		Cooling 330	CFM	1016	1011	1009	1006	1002
		CFM/Ton	Watts	81	123	168	216	266
		Cooling 310	CFM	955	950	947	944	940
		CFM/Ton	Watts	70	110	153	199	248
		Cooling 290	CFM	894	888	885	882	877
		CFM/Ton	Watts	59	97	138	183	231
		Cooling 450	CFM	1601	1599	1597	1594	1590
		CFM/Ton	Watts	269	334	401	469	539
		Cooling 420	CFM	1498	1496	1494	1491	1487
		CFM/Ton	Watts	224	284	347	411	477
Cooling	4.0 Ton	Cooling 400	CFM	1428	1426	1424	1422	1417
		CFM/Ton	Watts	196	254	314	376	439
		Cooling 370	CFM	1324	1321	1319	1317	1313
		CFM/Ton	Watts	160	214	270	327	387
		Cooling 350	CFM	1253	1251	1249	1246	1242
		CFM/Ton	Watts	138	190	243	298	355
		Cooling 330	CFM	1183	1180	1178	1175	1171
		CFM/Ton	Watts	119	167	218	271	326
		Cooling 310	CFM	1112	1109	1107	1104	1100
		CFM/Ton	Watts	102	147	196	246	299
		Cooling 290	CFM	1041	1037	1035	1032	1028
		CFM/Ton	Watts	86	129	175	223	275
Cooling	4.0 Ton	Cooling 450	CFM	1820	1819	1816	1812	1807
		CFM/Ton	Watts	388	462	538	615	693
		Cooling 420	CFM	1704	1702	1700	1697	1692
		CFM/Ton	Watts	321	390	461	533	607
		Cooling 400	CFM	1626	1624	1622	1619	1614
		CFM/Ton	Watts	281	347	415	484	554
		Cooling 370	CFM	1507	1505	1504	1501	1497
		CFM/Ton	Watts	228	289	352	417	482
		Cooling 350	CFM	1428	1426	1424	1422	1417
		CFM/Ton	Watts	196	254	314	376	439
		Cooling 330	CFM	1348	1346	1344	1342	1338
		CFM/Ton	Watts	168	223	280	338	399
Cooling 310	CFM	1268	1266	1264	1261	1257		
CFM/Ton	Watts	143	195	248	304	362		
Cooling 290	CFM	1188	1185	1183	1180	1176		
CFM/Ton	Watts	120	169	220	273	328		

Heating and Cooling Airflow Tables

Table 17. S9V2C100U5PSBC/D / S9V2C100D5PSBC/D Cooling Airflow (continued)

S9V2C100U5PSBC/D / S9V2C100D5PSBC/D Furnace Cooling Airflow (CFM) and Power (Watts) vs. External Static Pressure with Filter (iwc)								
Cooling	Unit Outdoor	Airflow Setting (CFM/ton)	External Static Pressure					
				0.1	0.3	0.5	0.7	0.9
Cooling	4.5 Ton	Cooling 450	CFM	2037	2034	2031	2026	2020
		CFM/Ton	Watts	537	621	706	792	879
		Cooling 420	CFM	1907	1905	1902	1898	1893
		CFM/Ton	Watts	444	522	601	682	763
		Cooling 400	CFM	1820	1819	1816	1812	1807
		CFM/Ton	Watts	388	462	538	615	693
		Cooling 370	CFM	1689	1687	1685	1682	1677
		CFM/Ton	Watts	313	382	452	524	597
		Cooling 350	CFM	1601	1599	1597	1594	1590
		CFM/Ton	Watts	269	334	401	469	539
		Cooling 330	CFM	1512	1510	1509	1506	1501
		CFM/Ton	Watts	230	291	354	419	485
		Cooling 310	CFM	1423	1421	1419	1417	1412
		CFM/Ton	Watts	195	252	312	373	436
Cooling 290	CFM	1334	1331	1329	1327	1323		
CFM/Ton	Watts	163	217	274	332	392		
Cooling	5.0 Ton ^(a)	Cooling 450	CFM	2249	2246	2241	2236	2228
		CFM/Ton	Watts	722	815	909	1004	1101
		Cooling 420	CFM	2108	2105	2101	2096	2090
		CFM/Ton	Watts	595	681	770	859	949
		Cooling 400	CFM	2013	2010	2007	2003	1997
		CFM/Ton	Watts	519	602	685	771	857
		Cooling 370	CFM	1869	1867	1864	1860	1855
		CFM/Ton	Watts	418	494	572	651	731
		Cooling 350	CFM	1772	1770	1768	1764	1759
		CFM/Ton ^(a)	Watts	359	431	505	580	656
		Cooling 330	CFM	1675	1673	1671	1667	1663
		CFM/Ton	Watts	305	374	443	514	587
		Cooling 310	CFM	1576	1575	1573	1570	1565
		CFM/Ton	Watts	258	322	388	455	523
Cooling 290	CFM	1478	1476	1474	1471	1467		
CFM/Ton	Watts	216	276	337	401	466		

^(a) Factory Setting.

Table 18. S9V2D120U5PSBC/D Heating Airflow

S9V2D120U5PSBC/D Furnace Heating Airflow (CFM), Temp. Rise (°F), and Power (Watts) vs. External Static Pressure with Filter (iwc)								
				1st Stage Capacity = 75,500 2nd Stage Capacity = 115,700				
Heating	Airflow Setting	Target Airflow		External Static Pressure				
				0.1	0.3	0.5	0.7	0.9
Heating 1st Stage	Low	1123	CFM	1138	1158	1178	1198	1218
			Temp. Rise	61	60	59	58	57
			Watts	115	176	236	297	358
	Medium Low	1332	CFM	1371	1383	1394	1406	1417
			Temp. Rise	51	50	50	49	49
			Watts	182	251	320	389	457
	Medium (a)	1404	CFM	1440	1450	1461	1471	1482
			Temp. Rise	48	48	48	47	47
			Watts	208	283	357	431	505
	High	1620	CFM	1669	1674	1680	1685	1691
			Temp. Rise	42	42	41	41	41
			Watts	315	388	460	533	605
Heating 2nd Stage	Low	1560	CFM	1654	1637	1621	1604	1587
			Temp. Rise	65	66	67	67	68
			Watts	291	360	430	499	568
	Medium Low	1850	CFM	1980	1951	1922	1893	1864
			Temp. Rise	55	56	57	58	58
			Watts	456	539	621	704	787
	Medium (a)	1950	CFM	2075	2037	1999	1961	1923
			Temp. Rise	52	53	54	55	56
			Watts	527	611	696	781	865
	High	2250	CFM	2280	2197	2114	2032	1949
			Temp. Rise	48	50	52	54	56
			Watts	795	819	842	865	888

(a) Factory Setting.

Table 19. S9V2D120D5PSBC/D Heating Airflow

S9V2D120D5PSBC/D Furnace Heating Airflow (CFM), Temp. Rise (°F), and Power (Watts) vs. External Static Pressure with Filter (iwc)								
				1st Stage Capacity = 75,800 2nd Stage Capacity = 116,100				
Heating	Airflow Setting	Target Airflow		External Static Pressure				
				0.1	0.3	0.5	0.7	0.9
Heating 1st Stage	Low	1160	CFM	1234	1240	1246	1252	1258
			Temp. Rise	56	56	56	55	55
			Watts	137	198	258	319	380
	Medium Low	1332	CFM	1305	1311	1318	1325	1332
			Temp. Rise	53	53	53	52	52
			Watts	158	221	284	347	410
	Medium	1404	CFM	1324	1510	1697	1884	2070
			Temp. Rise	53	46	39	32	25
			Watts	179	246	313	380	447
	High (a)	1620	CFM	1598	1484	1371	1257	1144
			Temp. Rise	44	47	49	52	54
			Watts	266	316	366	416	466
Heating 2nd Stage	Low	1750	CFM	1687	1673	1659	1645	1631
			Temp. Rise	63	64	64	65	65
			Watts	327	407	487	568	648
	Medium Low	1850	CFM	1788	1771	1754	1738	1721
			Temp. Rise	60	60	61	61	62
			Watts	380	464	549	633	718
	Medium	1950	CFM	1891	1862	1833	1803	1774
			Temp. Rise	56	57	58	60	61
			Watts	424	524	624	724	824
	High (a)	2250	CFM	2080	2100	2120	2140	2160
			Temp. Rise	51	51	51	51	51
			Watts	708	768	828	888	948

(a) Factory Setting.

Heating and Cooling Airflow Tables

Table 20. S9V2D120U5PSBC/D / S9V2D120D5PSBC/D Cooling Airflow

S9V2D120U5PSBC/D / S9V2D120D5PSBC/D Furnace Cooling Airflow (CFM) and Power (Watts) vs. External Static Pressure with Filter (iwc)								
Cooling	Unit Outdoor	Airflow Setting (CFM/ton)	External Static Pressure					
				0.1	0.3	0.5	0.7	0.9
Cooling	3.0 Ton	Cooling 450	CFM	1336	1346	1354	1360	1363
		CFM/Ton	Watts	163	221	281	341	402
		Cooling 420	CFM	1248	1258	1265	1271	1274
		CFM/Ton	Watts	137	191	247	304	361
		Cooling 400	CFM	1189	1199	1206	1211	1214
		CFM/Ton	Watts	121	173	227	281	336
		Cooling 370	CFM	1102	1110	1116	1121	1123
		CFM/Ton	Watts	100	148	198	249	301
		Cooling 350	CFM	1043	1051	1057	1060	1062
		CFM/Ton	Watts	87	133	181	230	279
		Cooling 330	CFM	985	991	996	999	1000
		CFM/Ton	Watts	76	119	165	211	259
		Cooling 310	CFM	927	932	936	937	938
		CFM/Ton	Watts	65	107	150	195	241
Cooling 290	CFM	869	872	874	875	875		
CFM/Ton	Watts	56	95	136	179	223		
Cooling	3.5 Ton	Cooling 450	CFM	1559	1567	1574	1579	1583
		CFM/Ton	Watts	244	312	381	450	519
		Cooling 420	CFM	1455	1464	1472	1477	1481
		CFM/Ton	Watts	204	267	331	396	462
		Cooling 400	CFM	1386	1395	1403	1409	1413
		CFM/Ton	Watts	179	240	301	363	426
		Cooling 370	CFM	1282	1292	1300	1305	1309
		CFM/Ton	Watts	147	203	260	318	376
		Cooling 350	CFM	1214	1223	1231	1236	1239
		CFM/Ton	Watts	127	181	235	290	346
		Cooling 330	CFM	1145	1154	1161	1166	1169
		CFM/Ton	Watts	110	160	212	265	318
		Cooling 310	CFM	1077	1085	1092	1096	1098
		CFM/Ton	Watts	94	142	191	241	292
Cooling 290	CFM	1009	1016	1021	1025	1026		
CFM/Ton	Watts	80	125	171	219	267		
Cooling	4.0 Ton	Cooling 450	CFM	1783	1789	1793	1796	1798
		CFM/Ton	Watts	350	427	505	584	663
		Cooling 420	CFM	1663	1671	1677	1681	1683
		CFM/Ton	Watts	290	362	436	509	583
		Cooling 400	CFM	1584	1592	1599	1603	1607
		CFM/Ton	Watts	255	324	393	464	534
		Cooling 370	CFM	1465	1474	1481	1487	1491
		CFM/Ton	Watts	207	271	336	401	467
		Cooling 350	CFM	1386	1395	1403	1409	1413
		CFM/Ton	Watts	179	240	301	363	426
		Cooling 330	CFM	1307	1317	1324	1330	1334
		CFM/Ton	Watts	154	211	269	328	388
		Cooling 310	CFM	1228	1238	1246	1251	1254
		CFM/Ton	Watts	131	185	240	296	352
Cooling 290	CFM	1150	1159	1166	1171	1174		
CFM/Ton	Watts	111	162	214	266	320		
Cooling	4.5 Ton	Cooling 450	CFM	2010	2011	2012	2011	2010
		CFM/Ton	Watts	482	569	657	745	834
		Cooling 420	CFM	1874	1878	1881	1882	1883
		CFM/Ton	Watts	399	480	562	645	727
		Cooling 400	CFM	1783	1789	1793	1796	1798
		CFM/Ton	Watts	350	427	505	584	663
		Cooling 370	CFM	1648	1656	1662	1666	1669
		CFM/Ton	Watts	283	355	427	500	574
		Cooling 350	CFM	1559	1567	1574	1579	1583
		CFM/Ton	Watts	244	312	381	450	519
		Cooling 330	CFM	1470	1479	1486	1492	1495
		CFM/Ton	Watts	209	273	338	404	469
		Cooling 310	CFM	1381	1390	1398	1404	1408
		CFM/Ton	Watts	178	238	299	361	423
Cooling 290	CFM	1292	1302	1310	1315	1319		
CFM/Ton	Watts	149	206	264	322	381		

Table 20. S9V2D120U5PSBC/D / S9V2D120D5PSBC/D Cooling Airflow (continued)

S9V2D120U5PSBC/D / S9V2D120D5PSBC/D Furnace Cooling Airflow (CFM) and Power (Watts) vs. External Static Pressure with Filter (iwc)								
Cooling	Unit Outdoor	Airflow Setting (CFM/ton)	External Static Pressure					
				0.1	0.3	0.5	0.7	0.9
Cooling	5.0 Ton ^(a)	Cooling 450	CFM	2238	2235	2230	2226	2220
		CFM/Ton	Watts	646	742	840	938	1036
		Cooling 420	CFM	2086	2086	2085	2083	2080
		CFM/Ton	Watts	533	623	714	806	897
		Cooling 400	CFM	1985	1987	1988	1988	1986
		CFM/Ton	Watts	466	552	639	726	813
		Cooling 370	CFM	1834	1838	1842	1844	1845
		CFM/Ton	Watts	377	456	536	617	698
		Cooling 350	CFM	1733	1740	1745	1748	1750
		CFM/Ton ^(a)	Watts	324	399	475	552	628
		Cooling 330	CFM	1633	1641	1647	1652	1655
		CFM/Ton	Watts	277	347	419	492	564
		Cooling 310	CFM	1534	1543	1550	1555	1558
		CFM/Ton	Watts	234	301	369	437	505
		Cooling 290	CFM	1435	1444	1452	1458	1461
		CFM/Ton	Watts	196	259	322	387	451

^(a) Factory Setting.

Integrated Furnace Control Display Codes

2 Stage Inducer with ECM Blower Motor Status Codes	
<i>IdL</i>	Idle
<i>Ht1</i>	First Stage Heating
<i>Ht2</i>	Second Stage Heating
<i>RrF</i>	Calculated airflow times 10 (080=800 CFM)
<i>CBF</i>	Continuous Fan
<i>CL1</i>	First Stage Cooling
<i>CL2</i>	Second Stage Cooling
<i>HP1</i>	First Stage Heat Pump
<i>HP2</i>	Second Stage Heat Pump
<i>dFt</i>	Defrost Mode
Menu Options	
<i>Err</i>	Active Alarm Menu
<i>L6F</i>	Last 6 Faults (To clear — Hold Option button down for 5 seconds)
<i>Cr</i>	Code Release Number
<i>COd</i>	Cooling Off Delay (Seconds)
<i>OdL</i>	Outdoor Tonnage
<i>OdU</i>	Outdoor Unit
<i>CBF</i>	Blower Constant Fan Airflow Multiplier (Percentage)
<i>CPc</i>	Cooling (CFM/Ton)
<i>CPH</i>	Heat Pump Heating (CFM/Ton)
<i>Hod</i>	Heat Off Delay (Seconds)
<i>ISd</i>	Inter-Stage Delay (Seconds)
<i>SHC</i>	Gas Heating CFM 2nd Stage (1st Stage is not adjustable)
<i>rUn</i>	Run Test Mode

Error Codes	
Alarm Error Code	Alarm Explanation
<i>E01</i>	Loss of the IRQ or other internal failures (Internal IFC error)
<i>E2.1</i>	Retry Exceeded (Flame never sensed, one hour lockout after 3 times)
<i>E2.2</i>	Recycles Exceeded (Flame sensed then lost, one hour lockout after 10 times)
<i>E2.3</i>	1st Stage Gas Valve Not Energized When It Should Be exceeded after 10 times
<i>E3.1</i>	Shorted Pressure Switch, 1st Stage
<i>E3.2</i>	Open Pressure Switch, 1st Stage
<i>E3.3</i>	Shorted Pressure Switch, 2nd Stage
<i>E3.4</i>	Open Pressure Switch, 2nd Stage
<i>E04</i>	Open Limit (Main Thermal, Rollout Switch, or Reverse Airflow Switch)
<i>E05</i>	Flame detected, should not be present

E6.1	Voltage reversed polarity
E6.2	Bad grounding
E6.3	(1) Igniter relay fails
	(2) Igniter open
E7.1	1st stage gas valve (MVL) is energized when it should be off
E08	Flame current is low, but still strong enough to allow operation
E09	Open Inducer Limit Switch or Condensate Pressure Switch
E11	(1) 1st stage gas valve not energized when it should be
	(2) 1st stage gas valve relay stuck closed
	(3) 2nd stage gas valve relay stuck closed
	(4) 2nd stage gas valve energized when it should not be
	(5) 2nd stage gas valve not energized when it should be
E12	Open fuse
E13	Blower HP/OEM ID
E14	No PM and local copy bad
E15	Both of unit Data File in PM and local Unit Data File are corrupt
E17	Blower motor no communication response
E18	Blower communication failure on the control

Fault Code Recovery

Fault Code Recovery


- To view the last 6 faults, press the "Menu" key until the "Last 6 Faults" (L6F) menu appears.
- Enter the menu by pressing the "Option" key.
- The last 6 faults can be viewed.

Clearing the Last 6 Faults

- To clear the last 6 faults, press the "Menu" key until the "Last 6 Faults" (L6F) menu appears.
- Enter the menu by pressing the "Option" key.
- Hold the "Option" key for at least 5 seconds.
- Release and a set of 3 dashes will be seen 3 times. This confirms the faults have been cleared.


Resetting Factory Defaults

- Display must be in Idle Mode.
- Push the "Menu" and "Option" buttons at the same time for 15 seconds then release.
- The 7 segment will flash "Fd" 3 times. This confirms the unit has been reset to the factory defaults.

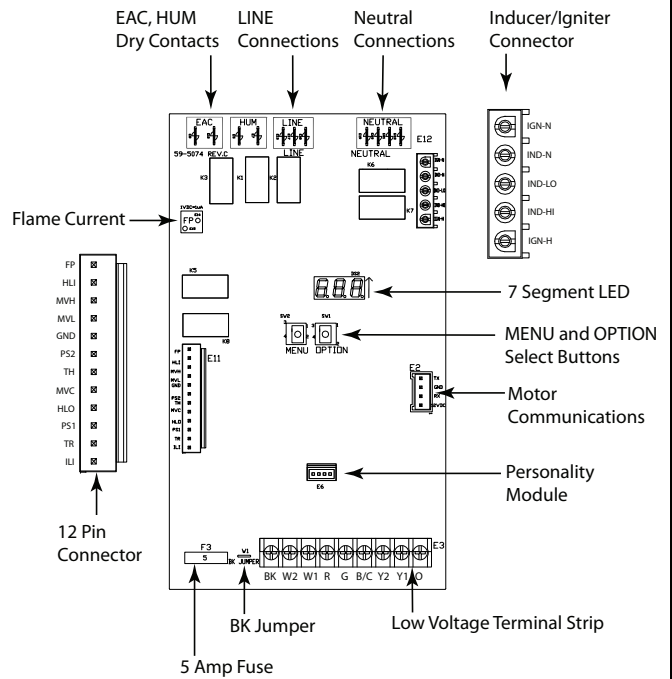

Integrated Furnace Control Menu

S9V2-PS Control System Menu

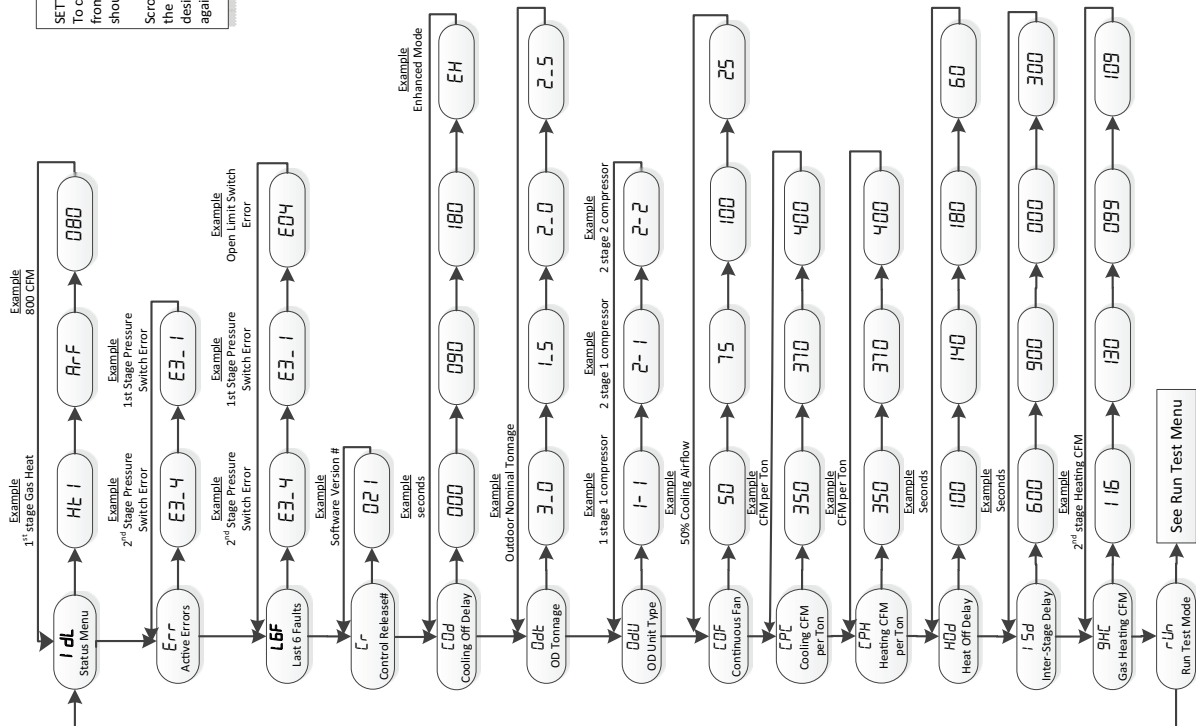

CLEARING THE LAST 6 FAULTS:
To clear the stored faults, scroll to the last 6 faults menu (L6F), enter the menu by scrolling to the right and hold the "OPTION" key for at least 5 seconds. Release and a set of 3 dashes will be seen 3 times. This confirms the faults have been cleared.

SETTING UP YOUR SYSTEM:
To change any factory default value, first remove any "call" from the furnace and allow any fan off delays to finish. (I n) should be seen on the display)
Scroll to the selected Menu item by momentarily depressing the "MENU" key and then depress the "OPTION" key to the desired setting. Then momentarily depress the "MENU" key again to save the change.

Model	ODT Options	[] = Default
S9V2B040U3PS	3T[3T], 1.5T, 2T, 2.5T	
S9V2B060U4PS	4T[4T], 1.5T, 2T, 2.5T, 3T, 3.5T	
S9V2B080U4PS	4T[4T], 2T, 2.5T, 3T, 3.5T	
S9V2C080U5PS	5T[5T], 3T, 3.5T, 4T, 4.5T	
S9V2C100U5PS	5T[5T], 2.5T, 3T, 3.5T, 4T, 4.5T	
S9V2D120U5PS	5T[5T], 3T, 3.5T, 4T, 4.5T	

Downflow
S9V2B040D3PS 3T[3T], 1.5T, 2T, 2.5T
S9V2B060D3PS 3T[3T], 1.5T, 2T, 2.5T
S9V2B080D4PS 4T[4T], 2T, 2.5T, 3T, 3.5T
S9V2C100D5PS 5T[5T], 2.5T, 3T, 3.5T, 4T, 4.5T
S9V2D120D5PS 5T[5T], 3T, 3.5T, 4T, 4.5T


Note:
Do not adjust COF above 50%.
CFM per Ton selections range from 290 – 450
Important:
When applied with zoning or a VSPD outdoor unit, the CFM/Ton must be set to 400

Gas Heating CFM shown is 2nd stage airflow. 1st stage airflow is ~80% of the selected 2nd stage airflow and cannot be adjusted.
Gas heating CFM can be adjusted while the unit is operating in gas heat mode to enable the technician to quickly adjust to the manufacturer's suggested heat rise across the heat exchanger.
Multiply the value shown by .10 for actual airflow.

Model	Gas Heating CFM	[] = Default
Upflow		
S9V2B040U3PSBC	088 [088], 140, 065, 083	
S9V2B040U3PSBD	088 [088], 120, 065, 083	
S9V2B060U4PS	116 [116], 130, 099, 109	
S9V2B080U4PS	126 [126], 133, 146, 120	
S9V2C080U5PSBC	145 [145], 156, 208, 119	
S9V2C080U5PSBD	145 [145], 156, 170, 119	
S9V2C100U5PS	206 [206], 215, 159, 198	
S9V2D120U5PS	195 [195], 225, 156, 185	
Downflow		
S9V2B040D3PS	088 [088], 095, 125, 065	
S9V2B060D3PS	103 [103], 113, 135, 090	
S9V2B080D4PS	133 [133], 148, 120, 126	
S9V2C100D5PS	187 [187], 210, 152, 180	
S9V2D120D5PS	225 [225], 175, 185, 195	

S9V2

Examples of System Status

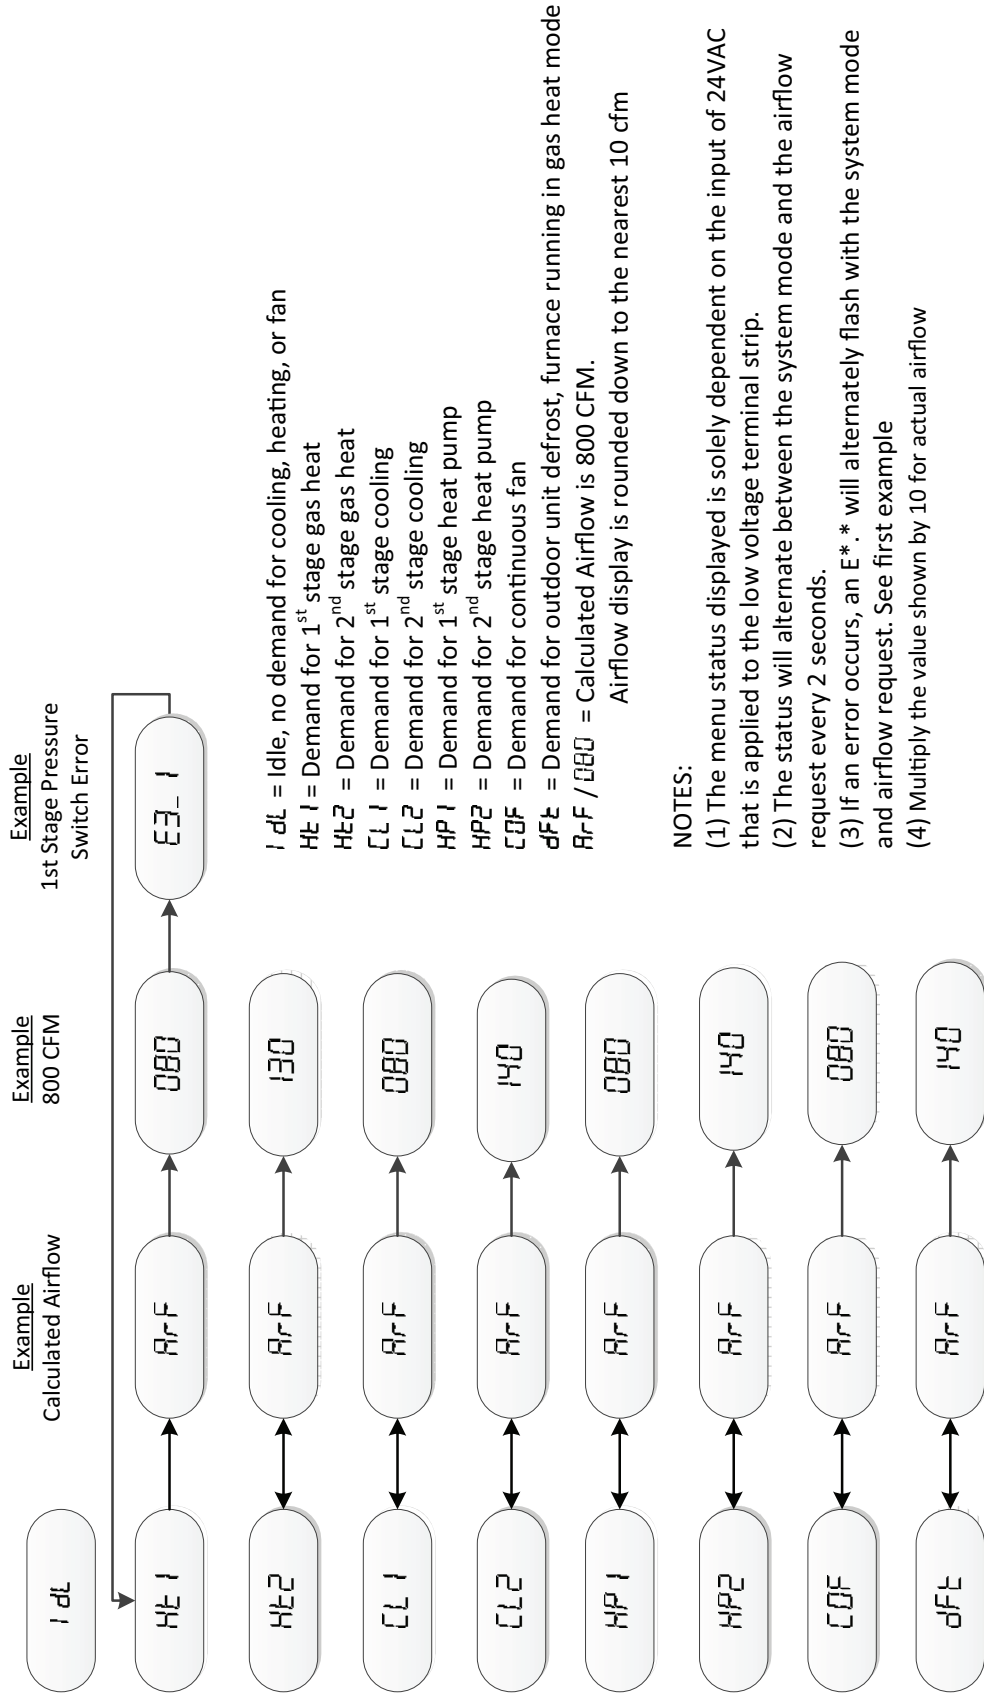


NOTES:

- (1) The menu status displayed is solely dependent on the input of 24VAC that is applied to the low voltage terminal strip.
- (2) The status will alternate between the system mode and the airflow request every 2 seconds.
- (3) If an error occurs, an E*. will alternately flash with the system mode and airflow request. See first example
- (4) Multiply the value shown by 10 for actual airflow

Integrated Furnace Control Menu

 Note: During run test mode, depressing the option key will allow the user to hold (HLD) that test sequence if measurements want to be taken. The exception is RU3 (ignitor).



Run Test Mode:

To enter Run Test Mode, scroll to `RU0` using the Menu key, then push the option key. The LED will flash `RU0` three times, then begin the test.

To exit the test mode, momentarily push the Menu key, cycle power to the furnace, or make a valid thermostat call for capacity or fan.

Sequence of Run Test Mode

`RU1` - Turns the inducer on in 1st stage for 30 seconds

`RU2` - Turns on the inducer on 2nd stage for 30 seconds

`RU3` - Turns the ignitor on for 10 seconds

`RU4` - Turns the circulating blower on 1st stage compressor speed for 10 seconds

`RU5` - Turns the circulating blower on 2nd stage compressor speed for 10 seconds

`RU6` - Turns the circulating blower on 1st stage gas heat speed for 10 seconds


`RU7` - Turns on the circulating blower on 2nd stage gas heat speed for 10 seconds

The above sequence will repeat two more times unless the Run Test Mode is exited, see above

Important: The Run Test Mode does not test fire the furnace or bring the outdoor unit on. It is designed to allow the technician to observe each mode to ensure the IFC, inducer, and circulating blower are performing as intended.

Belly Band Location

Distance from belly band to the front face of motor for minimum vibration

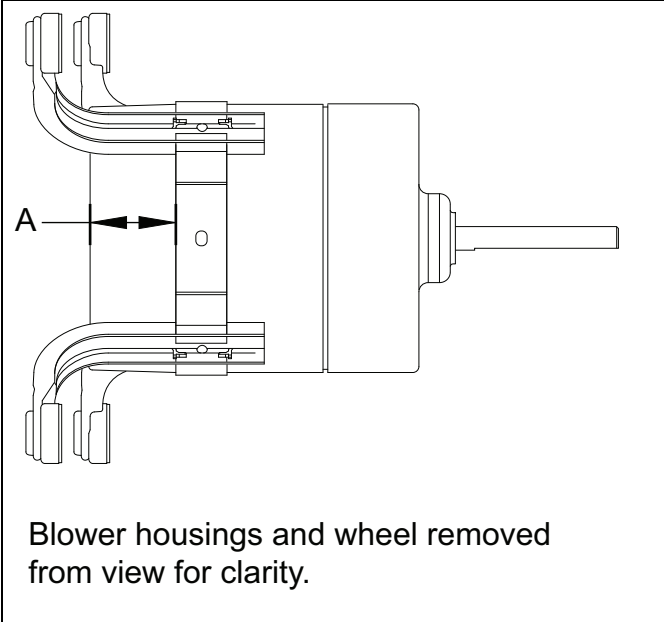


For C Models only	
Furnace Cabinet Size	Dimension "A" (inches)
B	2.705
C	1.790
D	1.790
For D Models only	
Furnace Cabinet Size	Dimension "A" (inches)
B	2.75
C	3.54
D	3.79

Troubleshooting


The following pages include troubleshooting flowcharts in reference for the 2 Stage S9V2* family of furnaces only. The information contained is for reference only and does not cover all scenarios or problems that may be encountered. ONLY qualified technicians should attempt to install, troubleshoot, or repair this appliance. Failure to follow all cautions and /or warnings could result in personal or property damage, including death.

Error Codes	
Alarm Error Code	Alarm Explanation
E01	Loss of the IRQ or other internal failures (Internal IFC error)
E2.1	Retry Exceeded (Failed to Establish Flame)
E2.2	Recycles exceeded (Loss of Established Flame) or 10X PS1 Open
E2.3	1st Stage Gas Valve Not Energized When It Should Be exceeded after 10 times
E2.4	Redundant Relay (HLO output) Not Energized when it should be exceeded after 10 times
E3.1	Shorted Pressure Switch, 1st Stage
E3.2	Open Pressure Switch, 1st Stage
E3.3	Shorted Pressure Switch, 2nd Stage
E3.4	Open Pressure Switch, 2nd Stage
E04	Open Limit (Main Thermal, Rollout Switch, or Reverse Airflow Switch)
E05	Flame detected, should not be present
E06	Voltage reversed polarity or Bad Grounding
E6.3	(1) Igniter relay fails
	(2) Igniter open
E7.1	1st stage gas valve (MVL) is energized when it should be off
E7.2	Redundant Relay (HLO output) Energized when it should Not be
E08	Flame current is low, but still strong enough to allow operation
E09	Open Inducer Limit Switch or Condensate Pressure Switch
E 10	Communication error between variable speed inducer and blower motor microprocessor
E11	(1) 2nd stage gas valve energized when it should NOT be
	(2) 2nd stage gas valve not energized when it should be
	(3) 1st stage gas valve not energized when it should be
	(4) Redundant relay (HLO output) not energized when it should be
E12	Open fuse
E13	Blower HP/OEM ID
E14	No PM and local copy bad
E15	Both of unit Data File in PM and local Unit Data File are corrupt
E17	Blower motor no communication response
E18	Blower communication failure on the control


IFC Component Layout

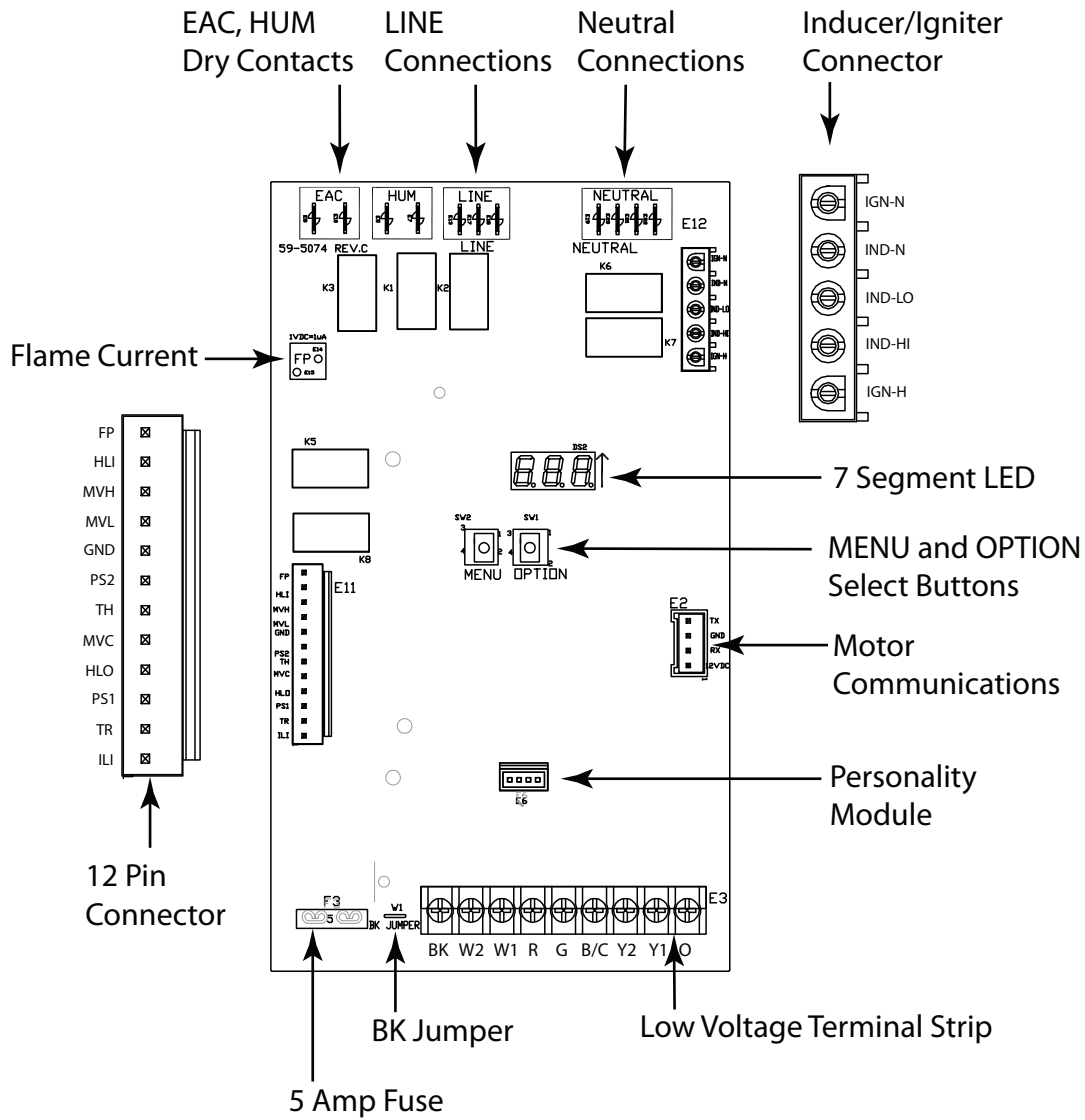

GETTING STARTED

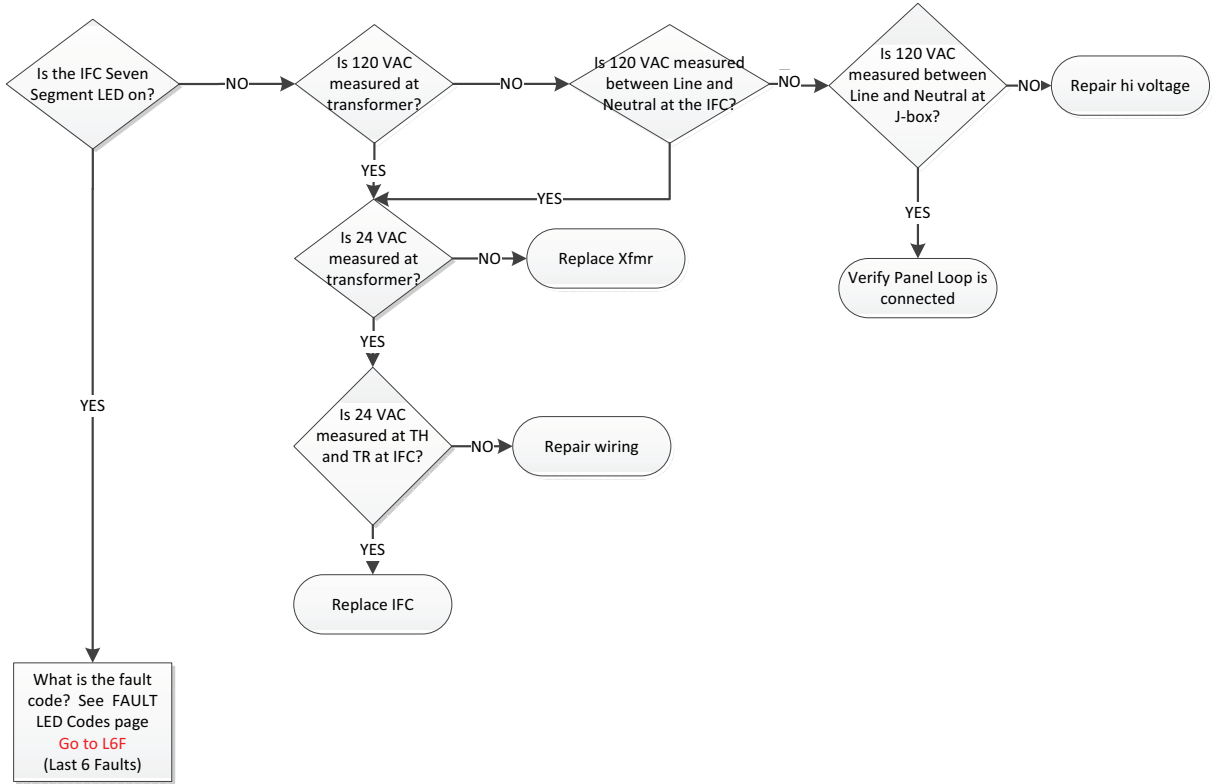

DEFINITION:
Internal failure of the control board

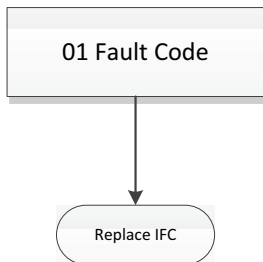

DEFINITION


RETRY Lock Out = 3 unsuccessful tries for ignition within a single call for heat. Lockout period is for one hour

Flame has never been sensed


All gas appliances in the home should be turned on to verify gas pressure

2.1 Fault Code

Disconnect electrical power to furnace.
Connect manometer to inlet gas pressure connector

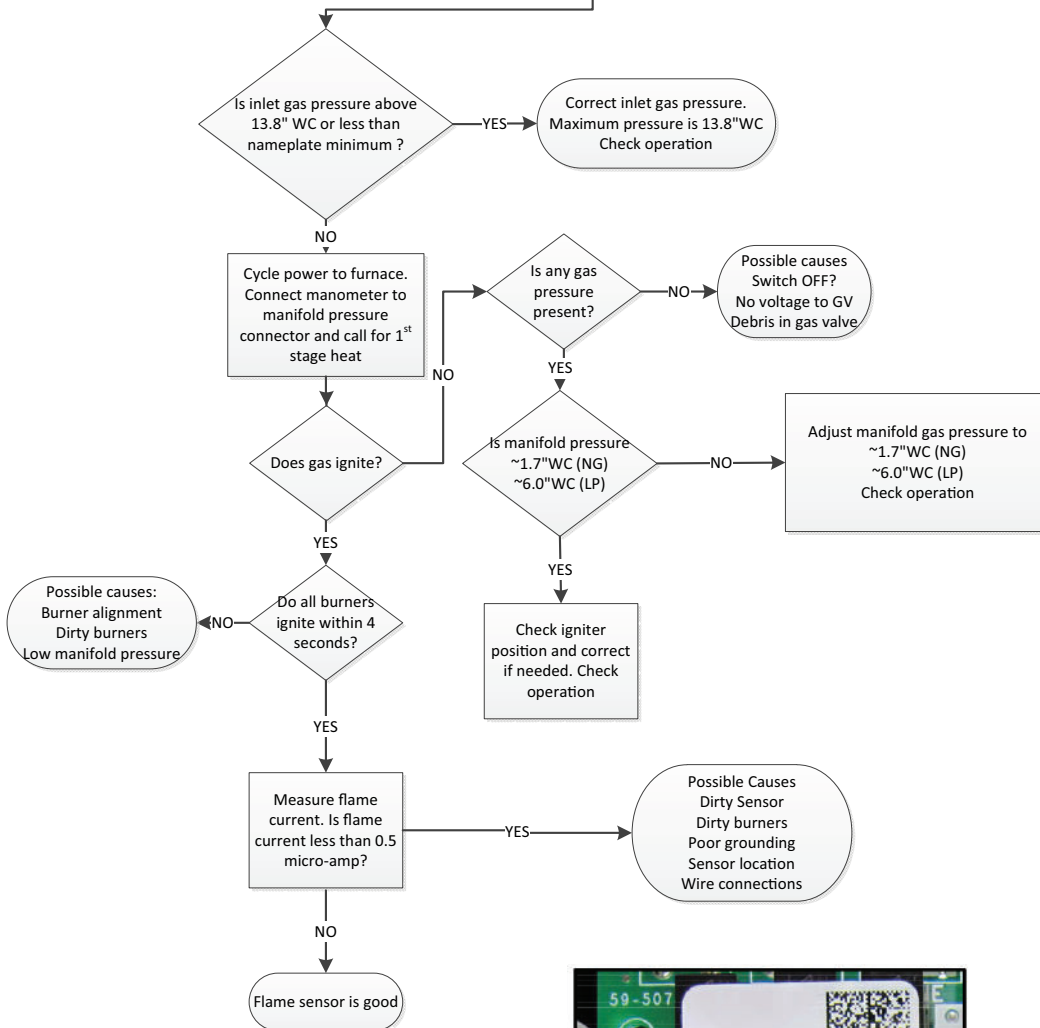

There are two flame sense pads located on the IFC, marked "FP". To measure flame current, use a VOM set to DC volts. Flame current will vary depending on the type of meter used. Typical flame current ranges from 0.75 – 3.0 micro-amps (0.75 – 3.0 VDC)

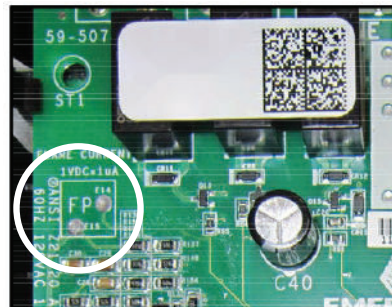

Troubleshooting


DEFINITION

RECYCLE Lock Out = 10 recycles within a single call for heat. Lockout period is for one hour.


Flame is sensed & then lost

All gas appliances in the home should be turned on to verify gas pressure


2.2 Fault Code

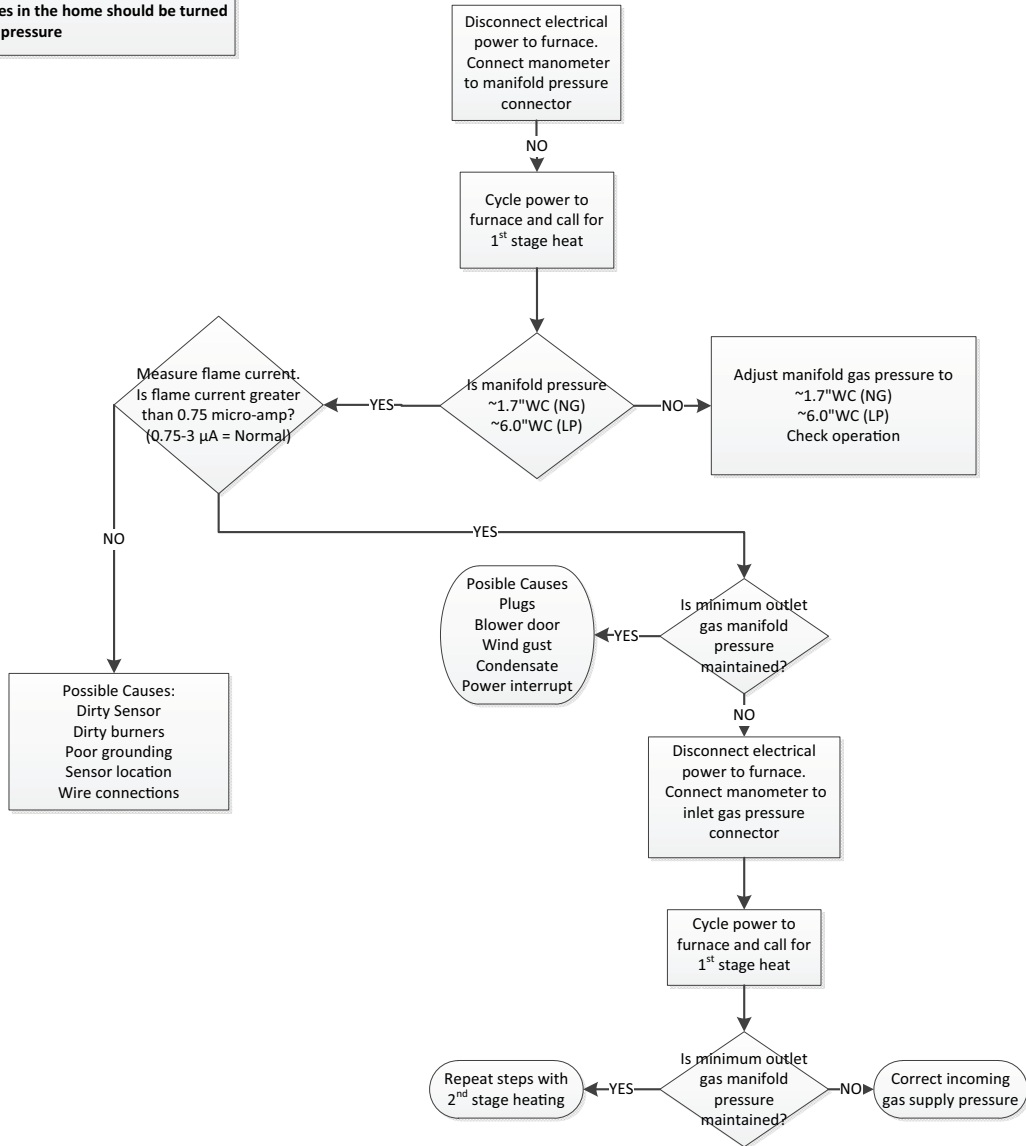


There are two flame sense pads located on the IFC, marked "FP". To measure flame current, use a VOM set to DC volts. Flame current will vary depending on the type of meter used. Typical flame current ranges from 0.75 – 3.0 micro-amps (0.75 – 3.0 VDC)

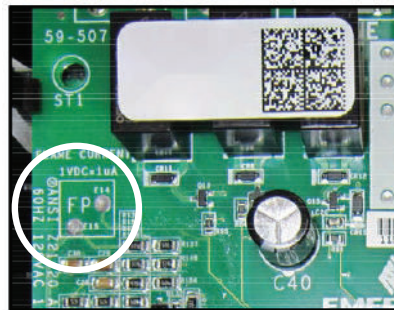

DEFINITION
 1st Stage Gas Valve not energized when it should be 10 times within the same call for heat .
24VAC not sensed on MVL 10 times

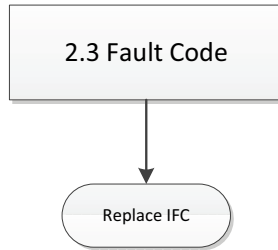


DEFINITION
 High limit output relay is not closed when it should be
24VAC not sensed on HLO 10 times

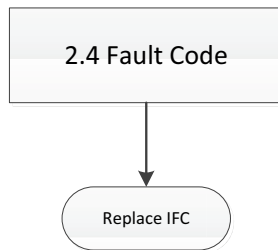

DEFINITION
 An error has occurred with the PS1, indicating that the pressure switch is closed when it should be open.
In most cases, the pressure switch is not the problem.
NOTE: Verify pressure switch wiring and tube routing are correct.

Note #1
 24 volts = Open Switch
 0 volts = Closed Switch

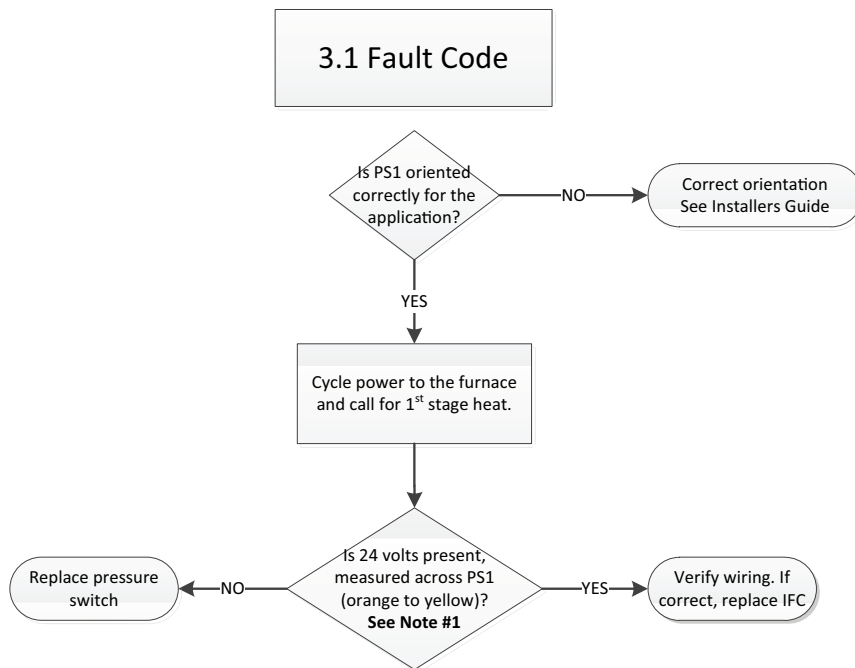

DEFINITION

An error has occurred with the PS1 indicating that the pressure switch is open when it should be closed.

In most cases, the pressure switch is not the problem.

NOTE: Verify pressure switch wiring and tube routing are correct.

PS1 Open errors can occasionally occur when wind gusts occur. The IFC will attempt to close both PS1 by increasing the voltage to the inducer motor


Note #1

24 volts = Open Switch
0 volts = Closed Switch

Note #2

Measured pressure is negative, greater than refers to magnitude only.

3.2 Fault Code

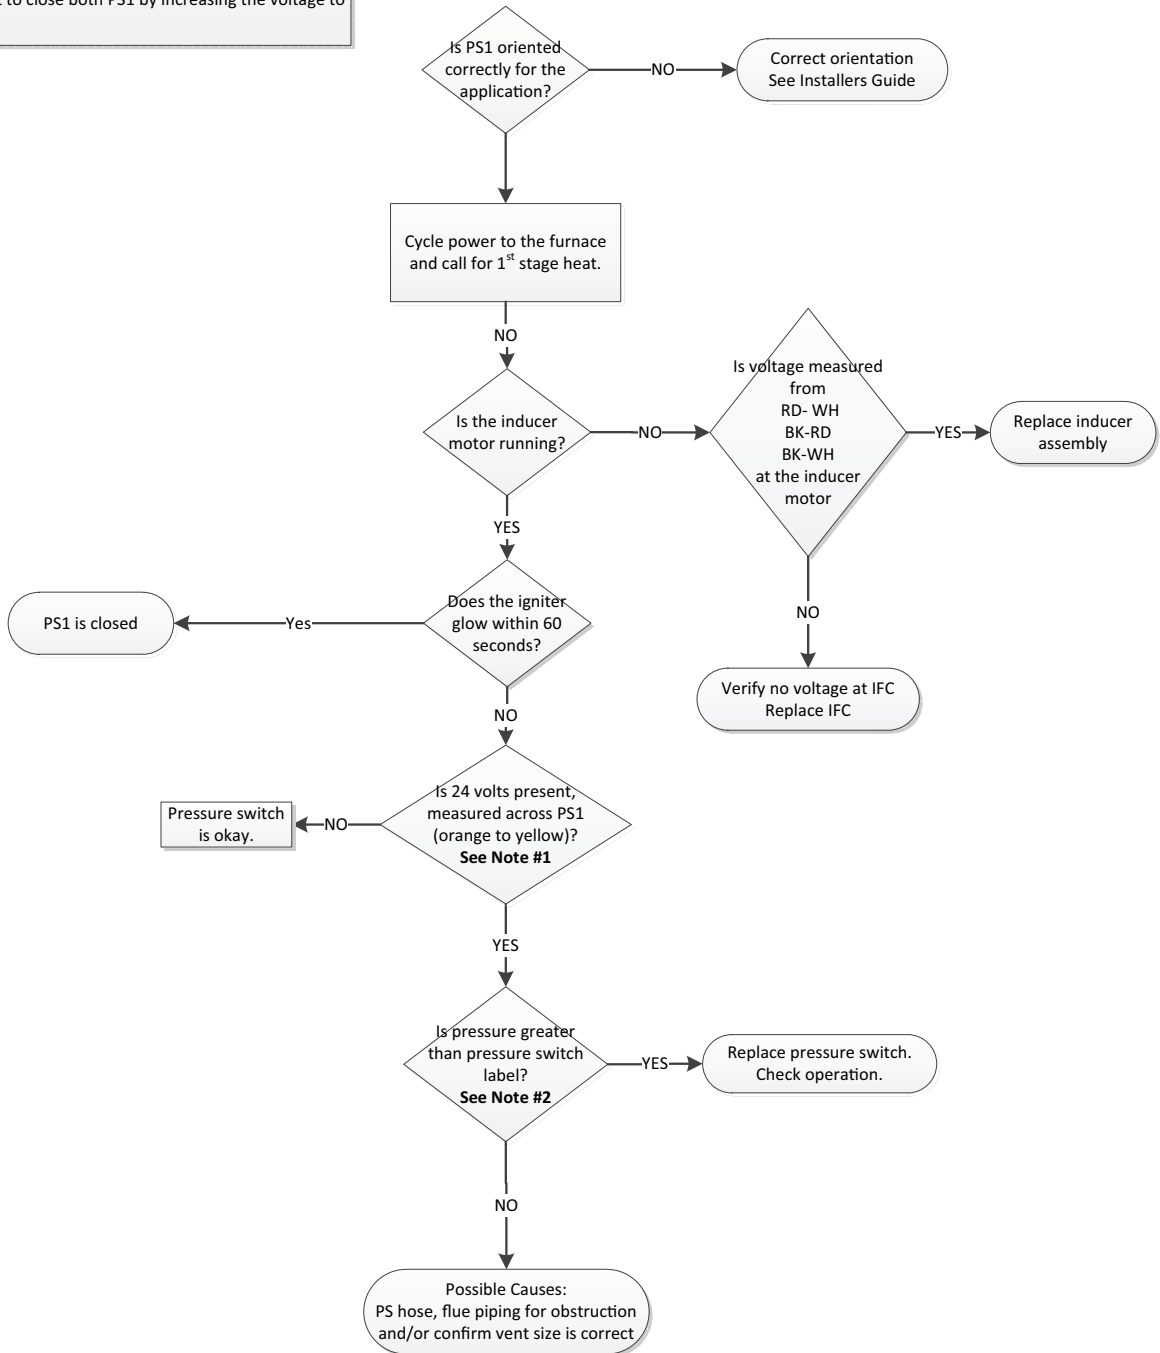

DEFINITION

An error has occurred with the PS2, indicating that the pressure switch is closed when it should be open.


In most cases, the pressure switch is not the problem.

NOTE: Verify pressure switch wiring and tube routing are correct.

3.3 Fault Code

Note #1

24 volts = Open Switch
0 volts = Closed Switch

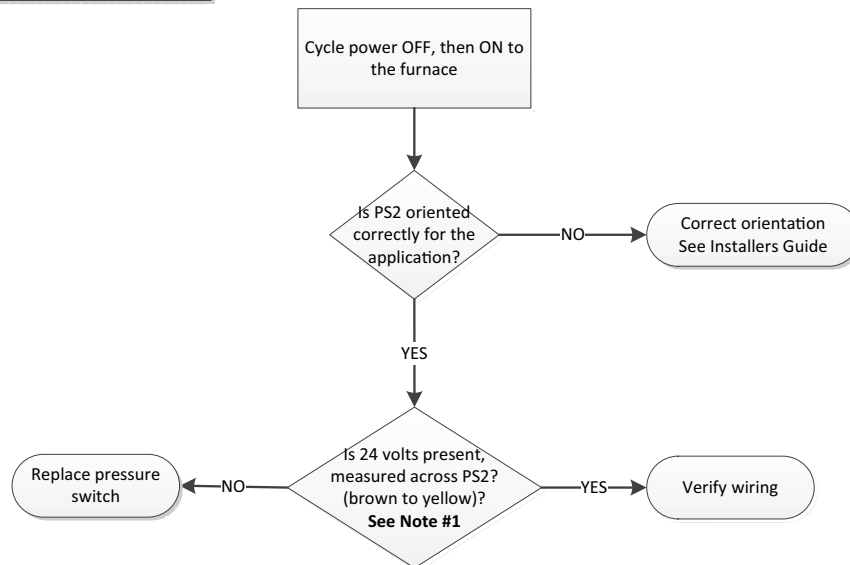

DEFINITION
 An error has occurred with the PS2 indicating that the pressure switch is open when it should be closed.


In most cases, the pressure switch is not the problem.

NOTE: Verify pressure switch wiring and tube routing are correct.

Note #1
 24 volts = Open Switch
 0 volts = Closed Switch

Note #2
 Measured pressure is negative, greater than refers to magnitude only.



3.4 Fault Code

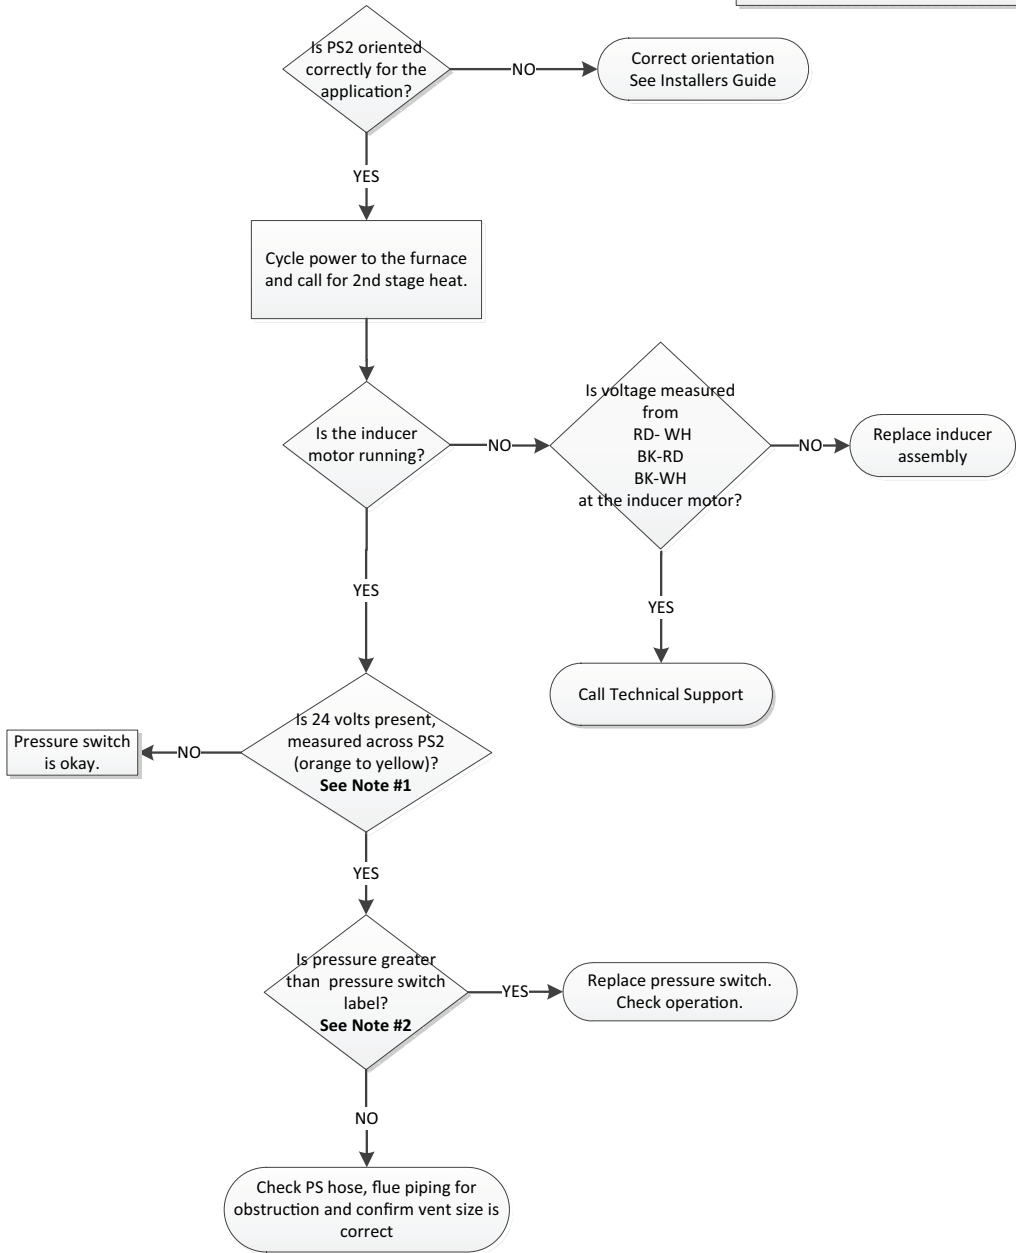


DEFINITION
 Limit switches are safety devices that will open when an abnormal high temperature has been sensed. REMOVE ALL JUMPER WIRING TO SWITCHES!
 Under no circumstances, shall these switches be left jumpered when not troubleshooting.
 Verify filters and blower wheels are clean

04 Fault Code

See next page for additional 04 faults

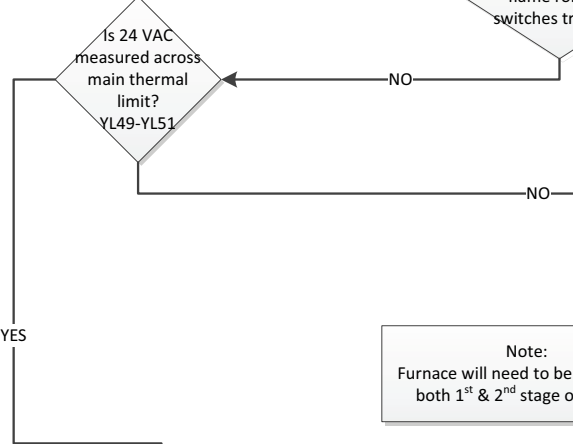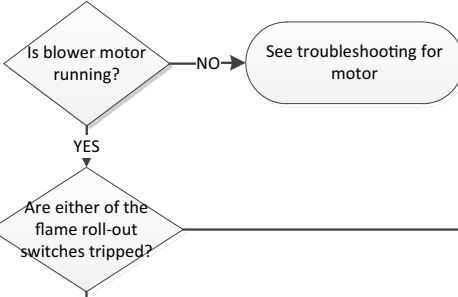

Note:
 Furnace will need to be checked in both 1st & 2nd stage operation

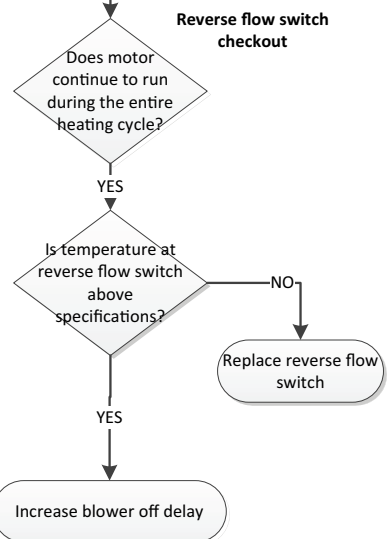


Make sure any temperature measuring devices (thermocouples, dial thermometers) used to estimate limit temperature are within 1/4 inch of limit disc


Replace high limit switch

DEFINITION
 Limit switches are safety devices that will open when an abnormal high temperature has been sensed.
REMOVE ALL JUMPER WIRING TO SWITCHES!
 Under no circumstances, shall these switches be left jumpered when not troubleshooting.


04 Fault Code Flame Rollout

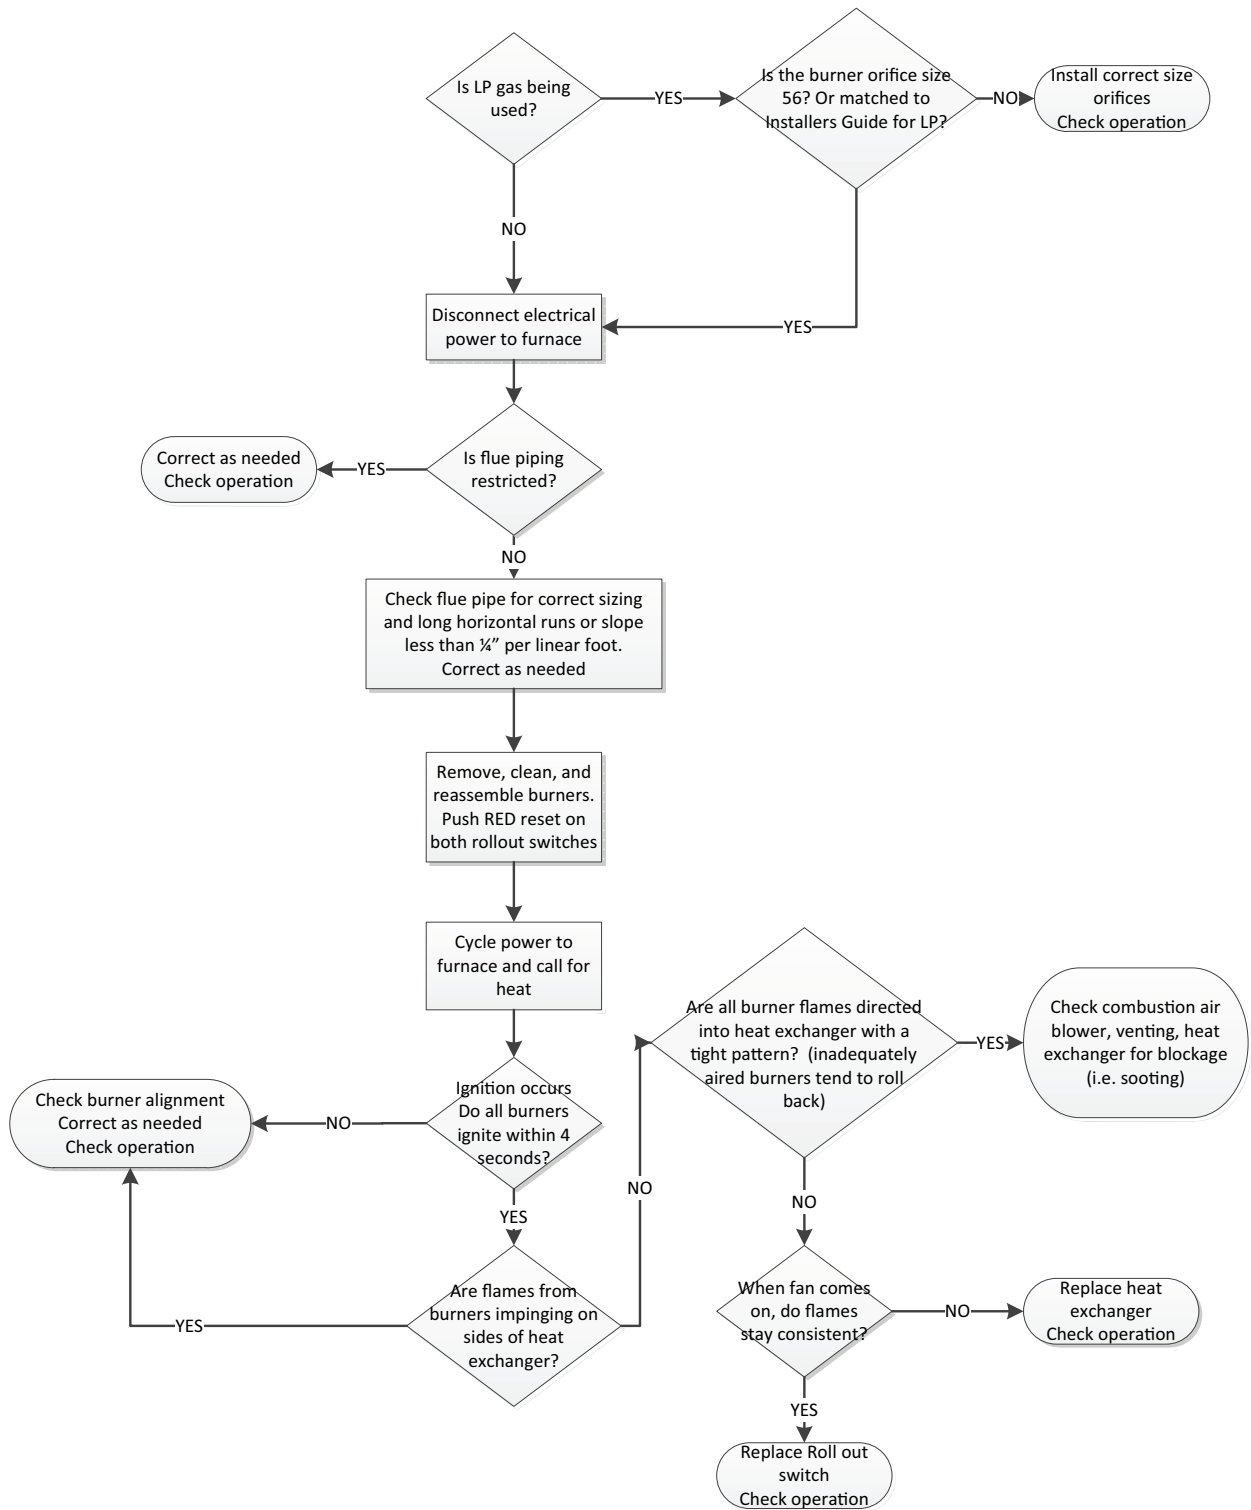

DEFINITION:
Flame is sensed when it should not be.

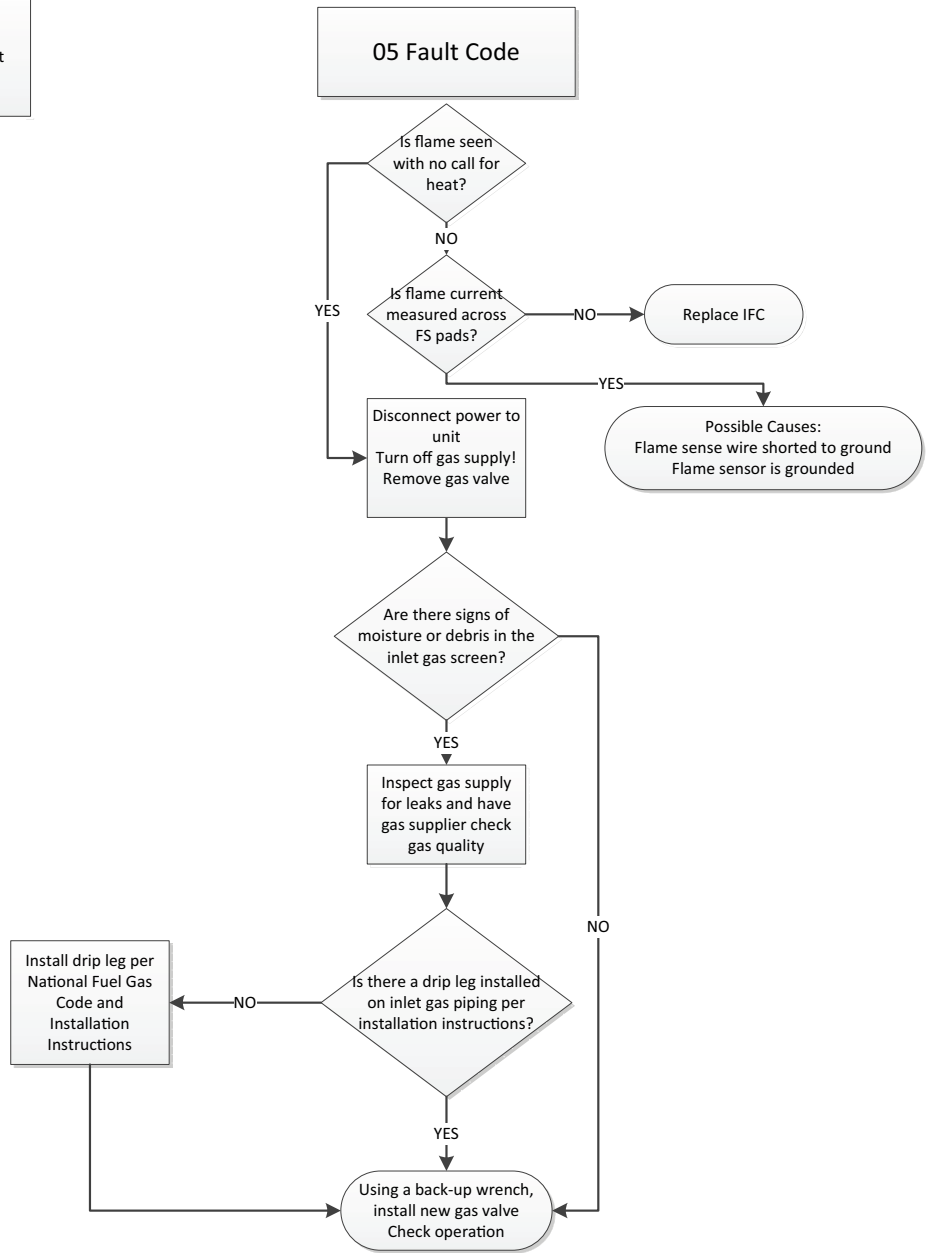

There are two flame sense pads located on the IFC, marked "FP". To measure flame current, use a VOM set to DC volts. Flame current will vary depending on the type of meter used. Typical flame current ranges from 0.75 – 3.0 micro-amps (0.75 – 3.0 VDC)

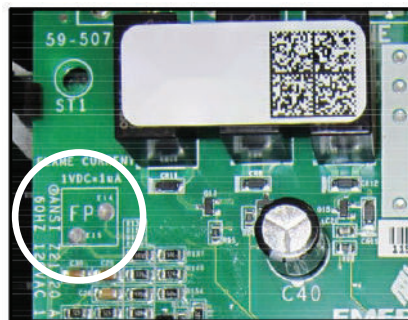


Troubleshooting

DEFINITION:


Polarity Fault – Incoming high voltage wiring is reversed

06 Fault Code Reversed Polarity

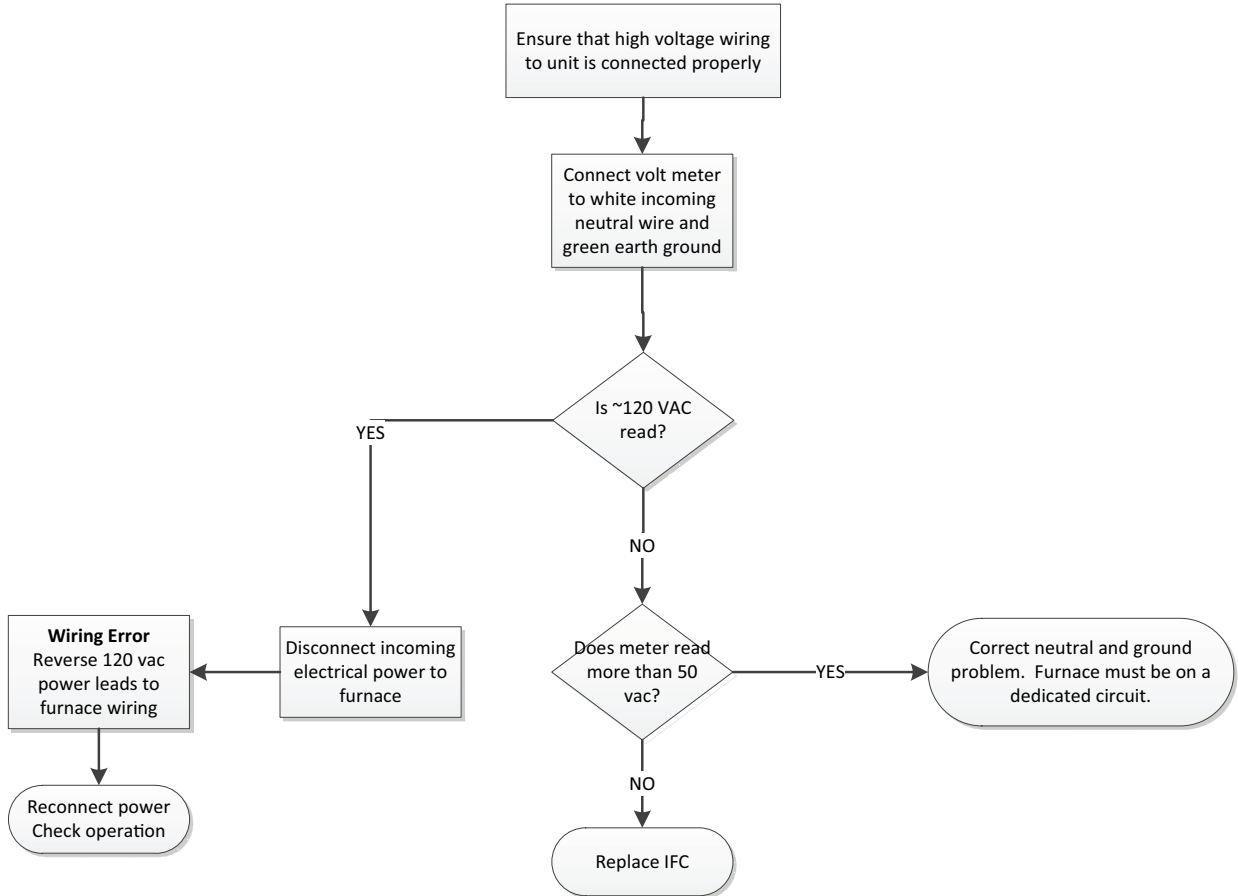


DEFINITION:
Ground Fault - Incoming or chassis ground connection is not sensed

06 Fault Code
Faulty Ground

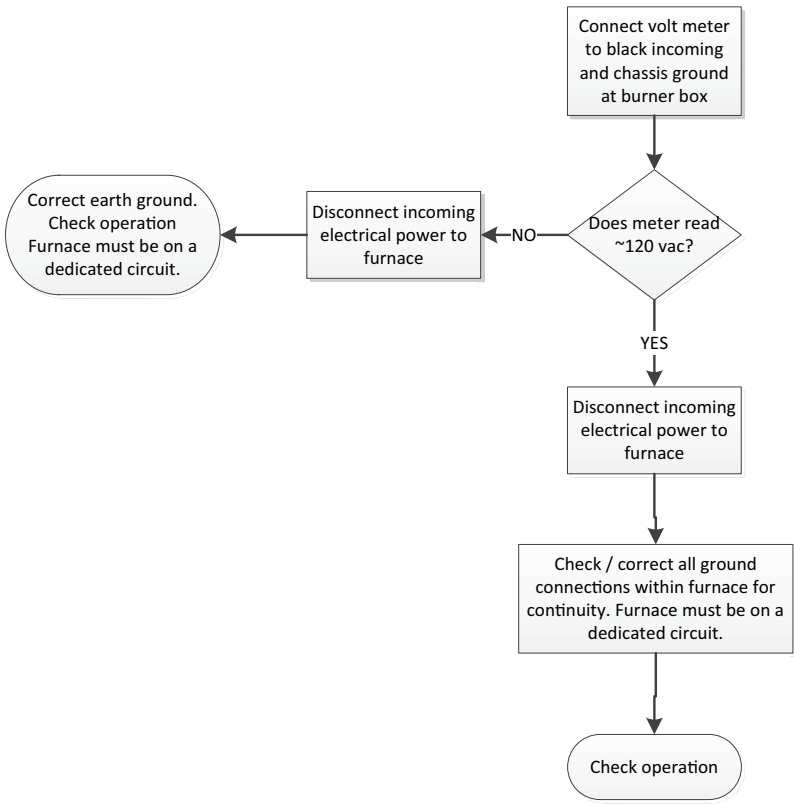


DEFINITION:
Igniter Relay Fault – The control board has sensed that the igniter relay has stuck closed

Ignitor Fault – The control board has sensed that the ignitor circuit is open or shorted.

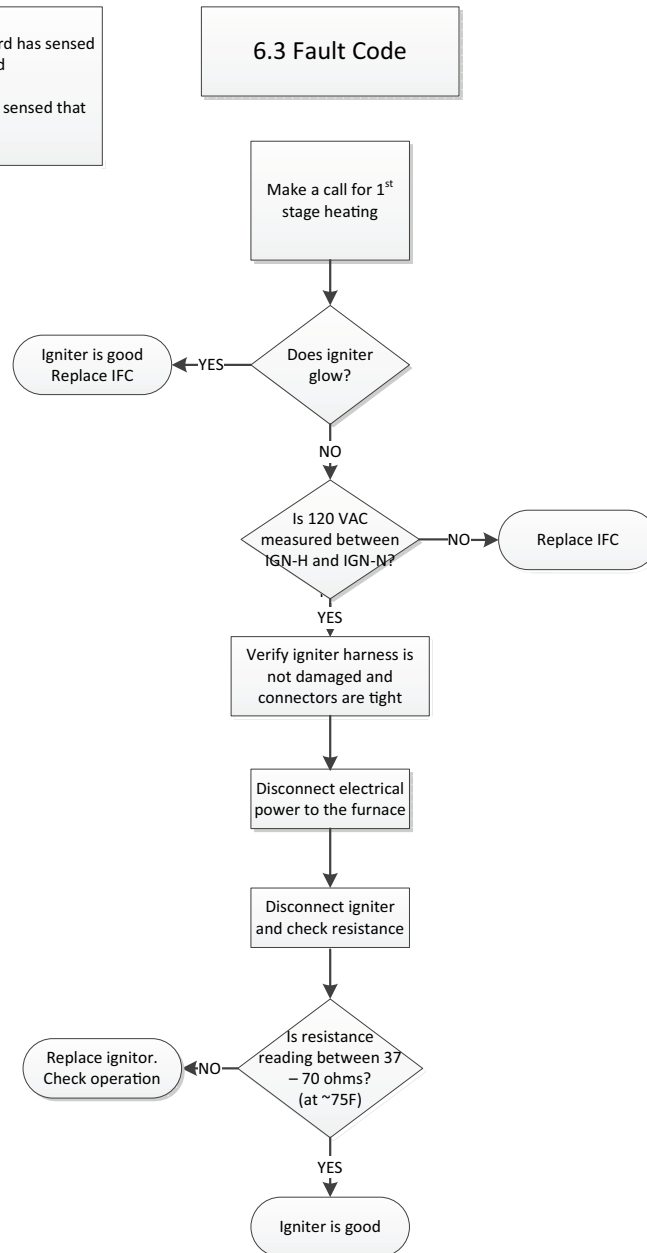

DEFINITION: External Gas Valve
Circuit Error (24 volts is present
when it should not be present)

7.1 Fault Code

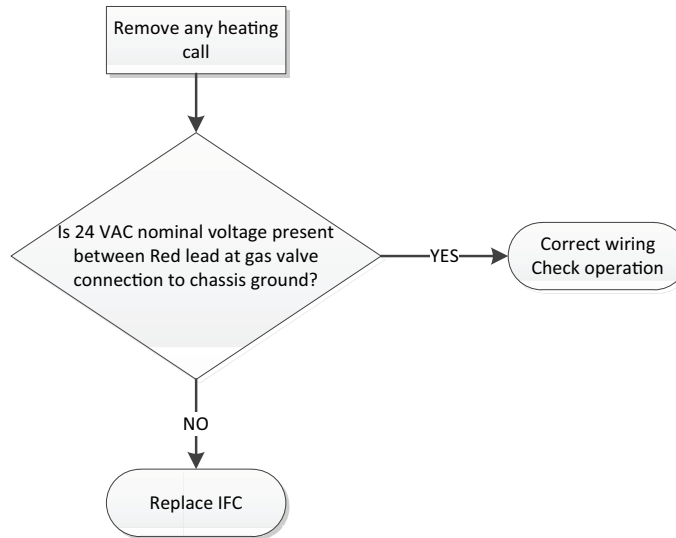

DEFINITION:
Internal control board error
Redundant HLO relay closed
when it should not be



7.2 Fault Code

Replace IFC


Troubleshooting

DEFINITION:
The flame sense current is less than 0.5 micro-amp DC

08 Fault Code

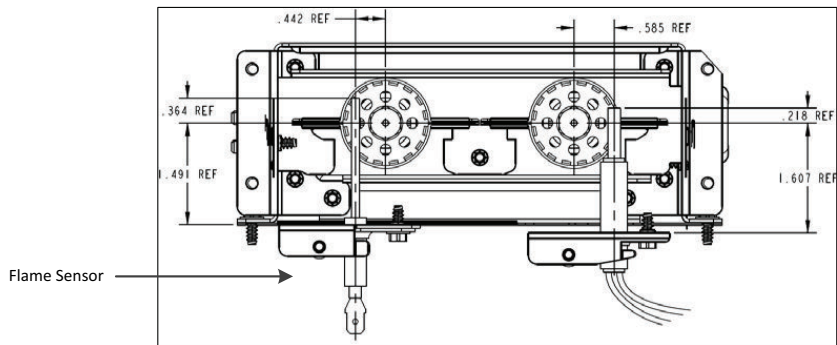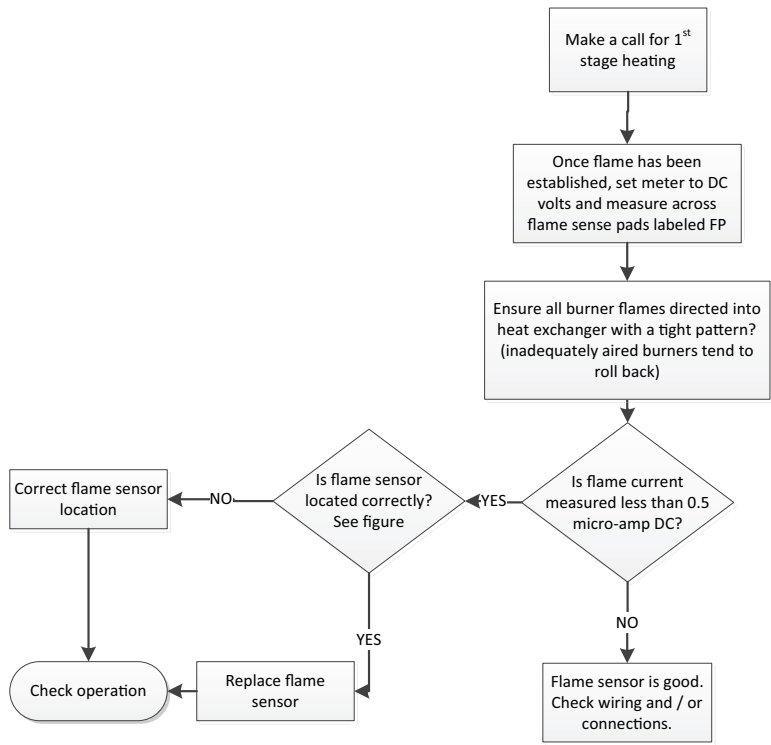


There are two flame sense pads located on the IFC, marked "FP". To measure flame current, use a VOM set to DC volts. Flame current will vary depending on the type of meter used. Typical flame current ranges from 0.75 – 3.0 micro-amps (0.75 – 3.0 VDC)

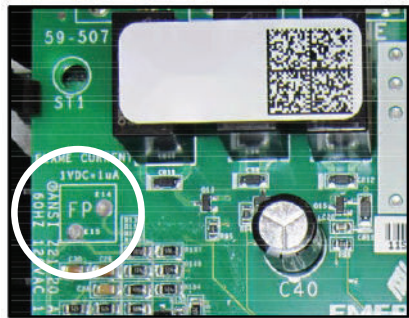


Definition:
 Condensate Pressure Switch Open: The condensate system is not free flowing and opened the safety switch OR
 Inducer Limit: This error is normally caused by improper installation or application of the furnace venting system.

09 Fault Code

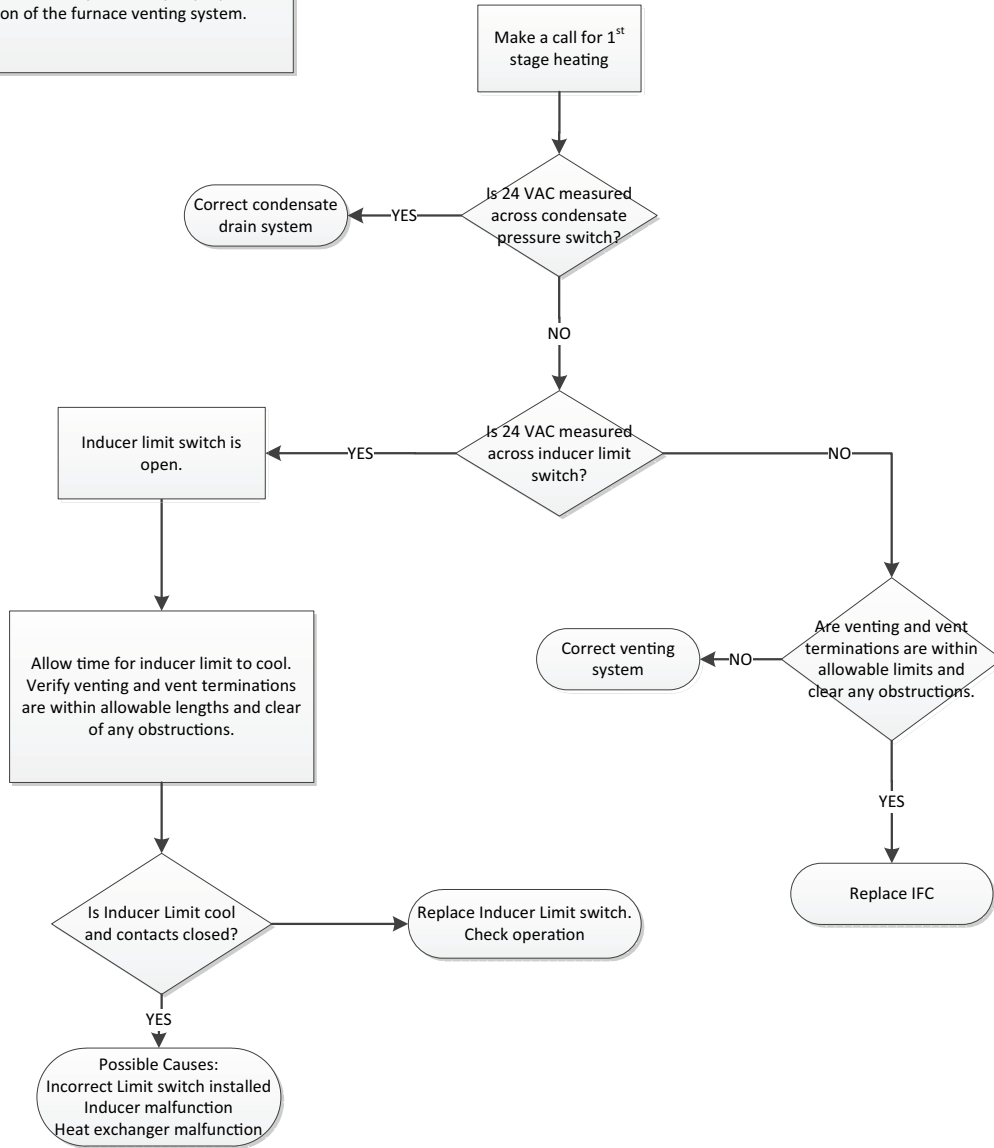

DEFINITION:
 Internal control board error. Communication error between the inducer and blower motor micro-processors


10 Fault Code

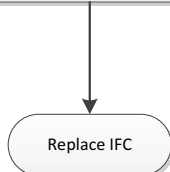

Troubleshooting


Definition
 The IFC has detected that internal gas valve relays have failed
 OR 24 VAC is being sensed at 2nd stage gas valve

11 Fault Code

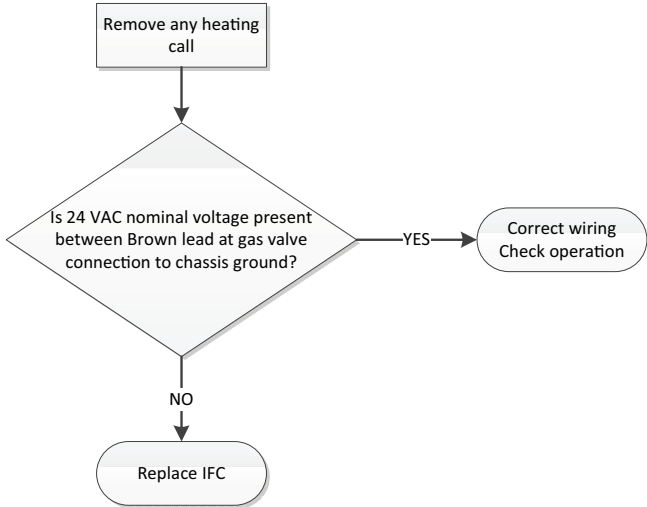


Definition:
 The onboard 5 amp fuse is open or missing.

12 Fault Code

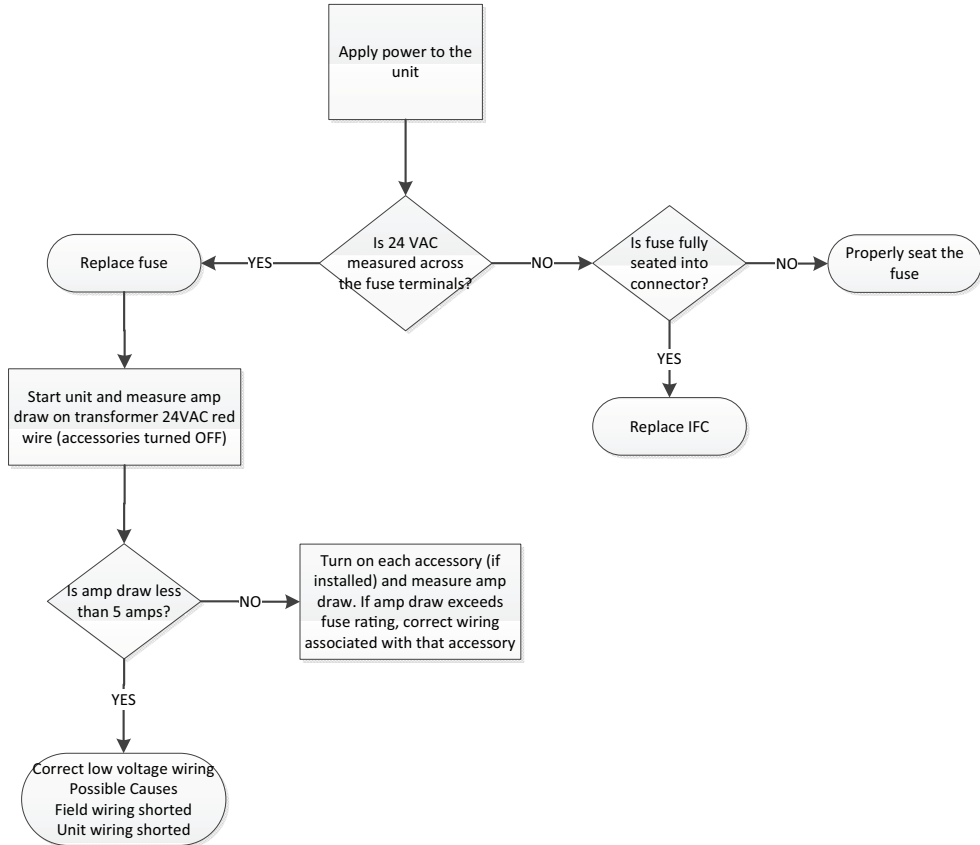


DEFINITION:
This fault is generated when the HP or OEM ID of the blower motor does not match the value that is programmed on the Personality Module

13 Fault Code

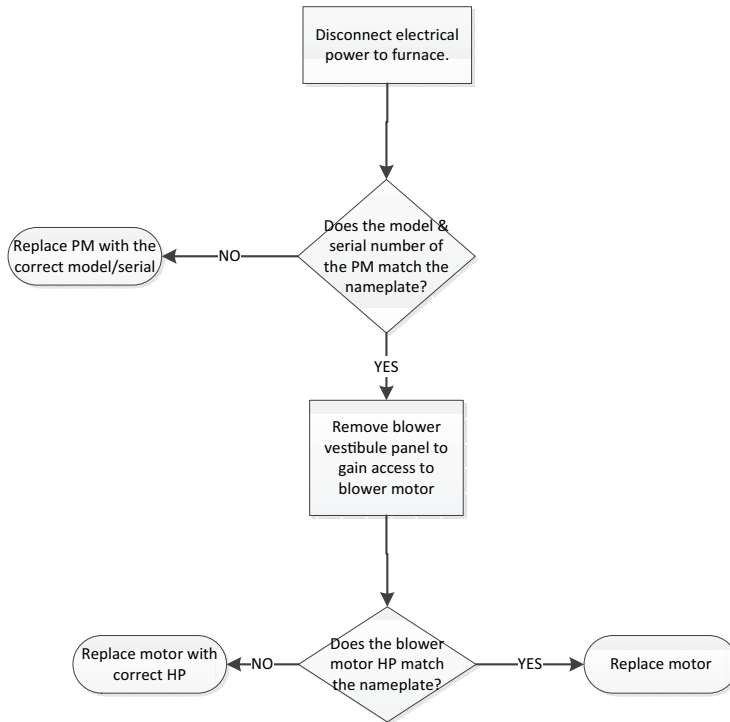

DEFINITION:
This fault is generated when the PM is missing and the onboard information cannot be read

14 Fault Code

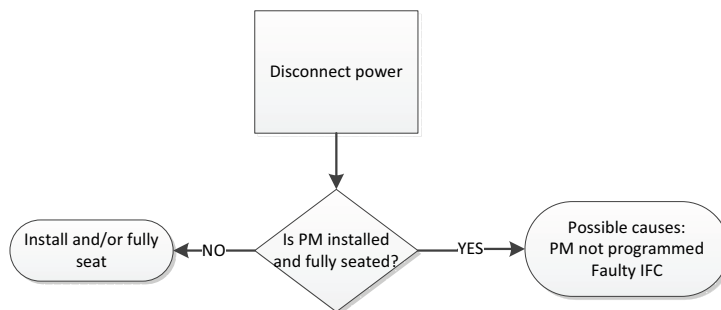

Troubleshooting

DEFINITION:
This fault is generated when the PM and the IFC information is corrupted

15 Fault Code


Disconnect power

Possible causes
PM corrupted
Faulty IFC

DEFINITION:
This fault is generated when IFC does not see a return signal from the blower motor


17 Fault Code

Disconnect power

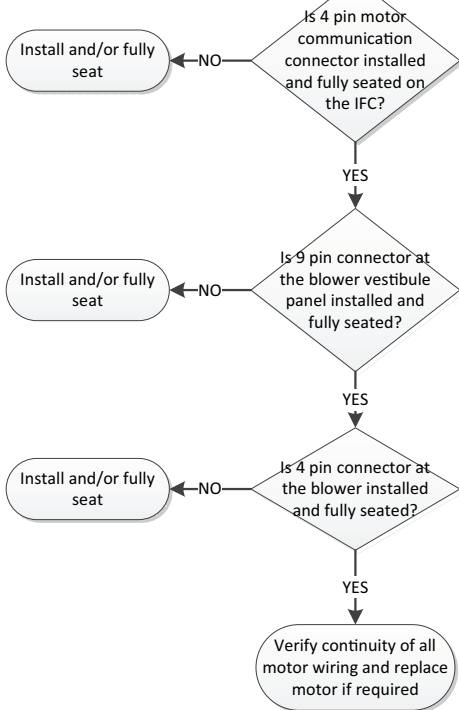

DEFINITION:
This fault is generated when the IFC does not see a send message itself.

18 Fault Code

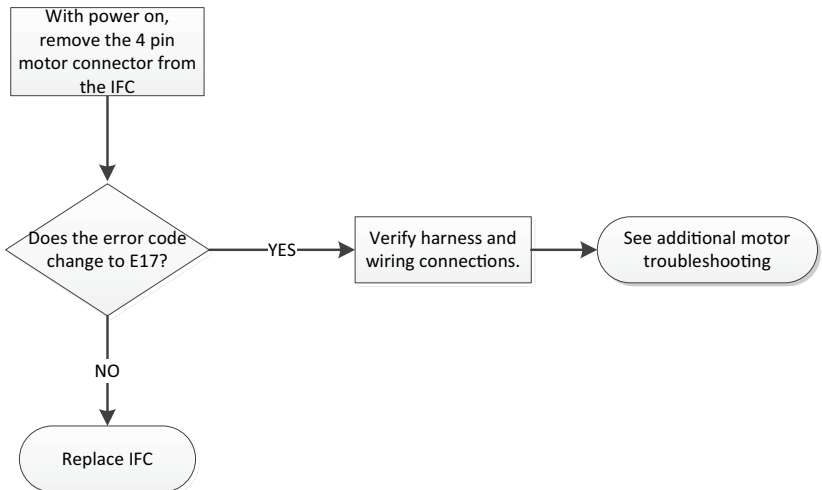

Serial Motor
Troubleshooting

Serial Motor Troubleshooting

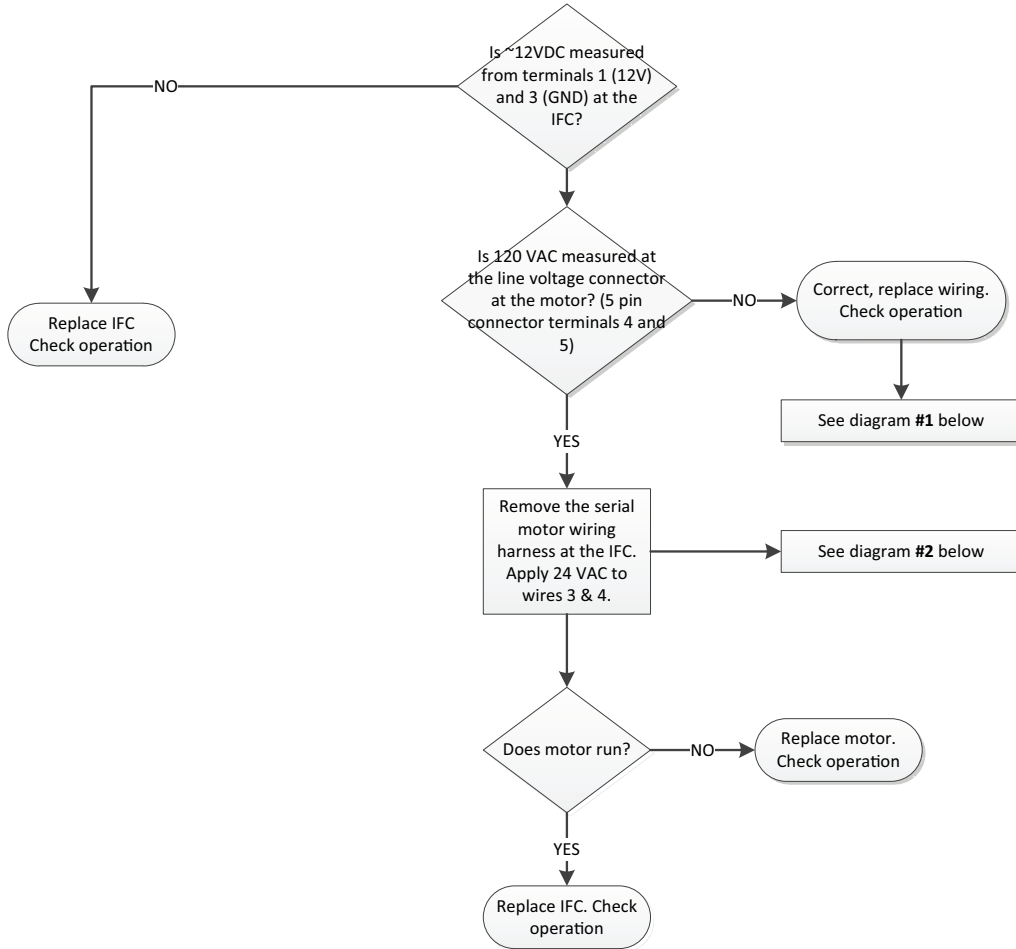


DIAGRAM #1


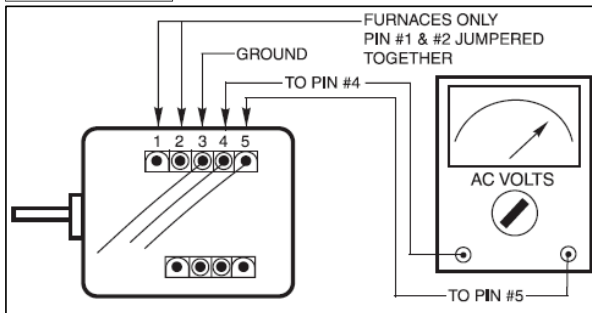


DIAGRAM #2

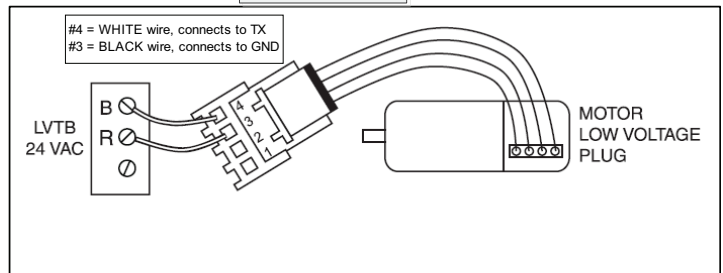

Part List

<ul style="list-style-type: none">• Igniter• Flame Sensor• In-shot Burner(s)• Gas Valve	<ul style="list-style-type: none">• Inducer Assembly• Blower Motor• Blower Wheel• IFC (Integrated Furnace Control)	<ul style="list-style-type: none">• Pressure Switch(es)• Main Thermal Limit• Roll-Out Switch(es)• Reverse Air Switch(es)
--	---	---

About Trane and American Standard Heating and Air Conditioning

Trane and American Standard create comfortable, energy efficient indoor environments for residential applications. For more information, please visit www.trane.com or www.americanstandardair.com.



The manufacturer has a policy of continuous data improvement and it reserves the right to change design and specifications without notice. We are committed to using environmentally conscious print practices.